

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 1

JBE TYPE	Heater	Socket	Sensitiv-ity	A	B	D	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	D	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	D	D	Test Pos.
1A3	50	38	*70	2	11	3	5	1	1013	2	41	*70	7	1	2	6	1	1S5	2	41	54	7	1	5	6	1
*Normally shows short on position 11.									*Normally shows short position 5-11									70 7 1 5 3 1								
*Normally shows grid emission.									10G3 1 38 *95 3 8 5 10 1									1T4 2 41 50 7 1 5 6 1								
1A3A	50	38	*70	2	11	3	5	1	*Tube good if it reads 20 or more.									1T5 1 38 *54 7 1 2 12 5 1								
*Normally shows short on position 11.									*No short test.									1U4 2 41 49 7 1 5 6 1								
*Normally shows grid emission.									1D-K1 1 40 *75 4 5 1 10 1									1U5 2 41 54 7 1 12 6 1								
1B3	50	38	*69	2	11	3	5	1	*Insert leads into pins 4 & 5 of socket 40.									1V2 1 40 99 5 4 12 1 1								
*Normally shows short on position 11.									*Top cap goes to top lead.									1X2 1 24 56 1 1								
*Normally shows grid emission.									*Tube good if it reads 20 or more.									2AF4 2 41 *24 4 3 2 6 1								
1C3	50	38	*85	2	11	3	5	1	10K29 1 40 *75 4 5 1 10 1									*Normally shows short position 1-7.								
*Normally shows short on position 11.									*Insert leads into pins 4 & 5 of socket 40.									2AH2 2 45 99 1 12 12 10 1								
*Normally shows grid emission.									*Top cap goes to top lead.									2AS2 2 45 99 1 12 12 10 1								
1C3A	50	38	*85	2	11	3	5	1	*Tube good if it reads 20 or more.									2AV2 2 40 *99 4 5 12 1 1								
*Normally shows short on position 11.									1D5 2 41 *54 7 1 12 6 1									*Tube good if it reads 55 or more.								
*Normally shows grid emission.									75 7 1 12 4 1									2A22 2 24 35 1 1								
1D3	50	38	*99	2	11	3	5	1	1D54 1 41 *24 4 3 2 6 1									2B3 2 32 30 1 1								
*Normally shows short on position 11.									*Normally shows short position 1-7.									2BA2 2 40 88 4 5 12 1 1								
*Normally shows grid emission.									1F1 1 41 58 7 1 5 6 1									2BJ2 2 24 52 1 1								
*Tube good if it reads 60 or more.									1F2 1 41 55 7 1 5 6 1									2BN4 2 41 *33 4 3 2 7 1								
1D3A	50	38	*99	2	11	3	5	1	1F3 1 41 55 7 1 5 6 1									*Normally shows short position 1-6.								
*Normally shows short on position 11.									1F5 2 38 48 7 2 12 5 1									2BU2 2 45 *80 1 12 12 10 1								
*Normally shows grid emission.									1F7 2 38 54 7 2 12 10 1									*Tube good if it reads 30 or more.								
*Tube good if it reads 60 or more.									64 7 2 12 4 1									2C51 6 39 29 9 1 12 3 1								
1Z4	6	31	8					1	1FD1 1 41 58 7 1 12 6 1									29 9 1 12 7 1								
8									70 7 1 12 3 1									2CN3A 2 32 30 1 1								
1A3	2	41	*70	7	1	2	6	1	1FD9 1 41 56 7 1 12 6 1									2CW4 2 43 *87 10 12 12 2 1								
*Normally shows short on position 5-11.									95 7 1 12 3 1									*For grid emission, Turn D Switch to position 4.								
1A5	2	38	53	7	2	12	5	7	1G3 1 32 55 5 7 2 12 4 1									2CY5 2 1 54 1 1								
1A7	2	38	54	7	2	12	5	1	1G6 1 38 55 7 2 12 4 1									2D21 6 41 32 4 3 5 1 1								
1A06	1	41	54	7	1	12	4	1	55 7 2 12 5 1									2DL4 2 39 *85 4 5 7 8 1								
1A06	1	41	48	7	1	12	4	1	1H2 1 24 58 5 7 2 12 10 1									*Normally shows short position 1-3-6-9.								
1A02	1	45	*99	1	12	12	10	1	1H5 1 38 55 7 2 12 10 1									2D54 2 43 *87 10 12 12 2 1								
*Tube good if it reads 20 or more.									1H6 2 38 54 7 2 12 6 1									*For grid emission, Turn D Switch to position 4.								
1AF4	1	41	50	7	1	5	6	1	65 7 2 12 4 1									2DX4 2 41 *62 3 4 1 7 1								
1AH5	1	41	58	7	1	12	6	1	1H35 1 41 54 7 1 12 4 1									*Normally shows short position 2-6.								
70 7 1 12 3 1									1J3 1 32 88 1 1									2DY4 2 41 *24 4 3 2 6 1								
1AJ4	1	41	58	7	1	5	6	1	1J6 2 38 53 7 2 12 4 1									*Normally shows short position 1-7.								
1AN5	1	41	40	7	1	5	6	1	53 7 2 12 5 1									2DZ4 2 41 *31 3 4 6 2 1								
1AU2	1	40	*100	5	4	12	1	1	1K3 1 32 90 1 1									*Normally shows short position 1-7.								
*Tube good if it reads 20 or more.									1L4 2 41 52 7 1 5 6 1									2E26 6 38 *40 7 2 1 5 1								
1AU3	1	32	95					1	1L6 2 41 56 7 1 12 4 1									*Normally shows short position 4-6.								
1AX2	1	24	93					1	1LA4 2 37 53 8 1 12 6 1									2EA5 2 1 80 1 1								
1AY2	1	39	95	1	9	12	10	1	1LA6 2 37 58 8 1 12 4 1									2EG4 2 43 *72 10 12 12 2 1								
*Connect two leads from 1AY2 bottom pins to pin holes No. 1 and 9 of Socket No. 39.									1LB4 2 37 53 8 1 12 6 1									*For grid emission, Turn D Switch to position 4.								
1B3	1	32	55					1	1LC5 1 37 54 8 1 5 6 1									2EN5 2 41 35 3 4 12 2 1								
1B7	1	38	55	7	2	12	5	1	1LC6 2 37 59 8 1 12 4 1									2ER5 2 41 33 4 3 1 2 1								
1BC2	1	24	57					1	1LD5 2 37 53 8 1 12 6 1									2ES5 2 41 33 4 3 1 2 1								
1BG2	1	40	*75	4	5	1	10	1	63 8 1 12 4 1									2EV5 2 1 57 1 1								
*Insert leads into pins 4 & 5 of socket 40.									1LE3 1 37 55 8 1 12 6 1									2FH5 2 41 33 4 3 1 2 1								
Top cap goes to top lead.									1LG5 2 37 50 8 1 5 6 1									2FS5 2 1 99 1 1								
*Tube good if it reads 20 or more.									1LH4 2 37 52 8 1 12 6 1									2FQ5 2 41 33 4 3 1 2 1								
18H2	1	39	95	1	9	12	10	1	60 8 1 12 4 1									2FQ5A 2 41 31 4 3 1 2 1								
*Connect two leads from solder lugs of the 18H2 to pin holes No. 1 and 9 of Socket No. 39.									1LN5 2 37 50 8 1 5 6 1									2FV6 2 1 54 1 1								
19K2	1	24	*53					1	1N2-A 1 32 53 5 7 2 12 10 1									2FY5 2 41 33 4 3 1 2 1								
*Tube good if it reads 40 or more.									1N5 2 38 53 7 2 12 10 1									2GK5 2 41 25 4 3 1 2 1								
1M02	1	24	56					1	1P5 2 38 53 7 2 12 10 1									2GU5 2 41 27 3 4 2 1 1								
1M2	1	24	56					1	1P10 3 41 *48 7 1 5 3 1									2GW5 2 41 29 3 4 6 2 1								
1B'2	1	45	*99	1	12	7	10	1	*Normally shows short position 2-6.									2HA5 2 5 56 1 1								
*Tube good if it reads 20 or more.									1P11 3 41 45 7 1 5 6 1									2HK5 2 5 56 1 1								
1C1	1	41	57	7	1	5	4	1	1Q5 2 38 40 7 2 12 5 1									2HM5 2 5 57 1 1								
1C2	1	41	48	7	1	12	4	1	1R-K23 1 24 35 1 1									2H05 2 5 55 1 1								
1C3	1	41	54	7	1	12	4	1	1R-K41 1 24 *53 1 1									2HR8 2 39 33 4 5 2 9 1								
1C4	2	38	48	7	2	12	5	1	*Tube good if it reads 40 or more.									2T4 2 41 *33 4 3 2 6 1								
1C5	2	38	54	7	2	12	5	1	1R4 2 37 60 8 1 12 4 1									*Normally shows short position 1-7.								
1C6	2	38	54	7	2	12	10	1	1R5 2 41 53 7 1 5 4 1									3A2 3 24 35 1 1								
1C7	2	38	53	7	2	12	5	1	1S2-A 1 24 35 1 1									3A3 3 32 54 1 1								
1C8	2	38	55	7	2	12	10	1	1S4 2 41 *44 7 1 5 3 1									3A3A 3 32 54 1 1								
1C9	2	38	75	7	2	12	8	1	*Normally shows short position 26.																	

Page 2

\*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.



TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.
4HG8	4	39	25	4	5	3	2	1	5BE8	5	14	72					1	5HC7	5	36	*35	1	12	5	9	1
			25	4	5	1	6	1				55					2				*35	1	12	5	11	1
4HK5	4	5	56					1	5BK7	5	8	55					1	*Normally shows short position 7-10.								
4HM5	4	5	57					1				55					2	5HG8	5	39	24	4	5	3	2	1
4HM6	4	9	68					1	5B05	5	23	68					1				25	4	5	1	6	1
4HQ5	4	5	55					1	5B07	5	8	54					1	5H26	5	1	83					1
4HR8	4	39	33	4	5	2	0	1				54					2	5J6	5	2	60					1
4HS8	4	21	99					1	5BR8	5	14	72					1				60					2
			99					2				55					2	5JK6	5	1	61					1
4HT6	4	9	60					1	5BS8	5	8	54					1	5JL6	5	1	23					1
4JC6	4	9	65					1				54					2	5JW8	5	11	80					1
4JC6A	4	9	59					1	5BT8	5	39	33	5	4	12	8	1				85					2
4JD6	4	9	61					1				54	5	4	12	1	1	5KD8	5	11	68					1
4JH6	4	1	64					1	5BW8	5	39	33	5	4	12	2	1				52					2
4JK6	4	1	61					1				34	5	4	7	1	1	5KE8	5	11	88					1
4JL6	4	1	23					1				34	5	4	7	9	1				53					2
4JW8	4	11	80					1	5BZ7	5	8	53					1	5KZ8	5	39	26	4	5	12	2	1
			85					2				53					1				26	4	5	12	9	1
4KE8	4	11	88					1	5CG8	5	14	73					1	5LJ8	5	14	85					1
			53					2				57					2				60					2
4KF8	4	21	92					1	5CL8	5	14	69					1	5MB8	5	14	84					1
			92					2				51					2				61					2
4KN8	4	39	86	4	5	12	1	1	5CM6	5	16	64					1	5MF8	5	36	35	1	12	6	7	1
			90	4	5	12	6	1	5CM8	5	39	33	5	4	12	2	1				34	1	12	6	10	1
4KT6	4	9	52					1				38	5	4	12	9	1	5M-HH3	5	2	56					1
4LJ8	4	14	85					1	5CQ8	5	11	72					1				56					2
			60					2				55					2	5M-K9	5	41	30	3	4	12	5	1
4LU6	4	1	52					1	5CR8	5	39	*32	5	4	12	2	1	5M08	5	11	65					1
4MK8	4	21	98					1				*34	5	4	12	9	1				66					2
			98					2	*Normally shows short position 8.								5N1039A	6	1	63					1	
4M-P12	4	1	60					1	5CU4	5	38	28	8	2	12	4	1	5P-29	6	29	*62					1
4M-P26	4	7	81					1				28	8	2	12	6	1	*For plate cap, use jack next to socket 26								
4R-HH2	4	8	53					2	5CZ5	5	16	60					1	5R4	5	33	22					2
			53					2	5DB4	5	33	16					1				22					1
4R-HH8	4	39	86	4	5	12	1	1				16					2	5RDDH1	5	39	41	5	4	12	8	1
			90	4	5	12	6	1	5DH8	5	14	61					1				35	5	4	12	1	1
4RHH15	4	8	53					1				73					2				33	5	4	12	6	1
			53					2	5DJ4	5	33	16					1	5R-HP1	4	11	66					1
5AF4	5	41	*24	4	3	2	6	1				16					2				55					2
*Normally shows short position 1-7.									5EA8	5	11	71					1	5R-HR1	5	11	52					1
5AF11	5	36	31	1	12	12	11	1				56					2				55					2
			31	1	12	12	8	1	5EH8	5	12	71					1	5R-K16	5	39	27	4	5	12	1	1
			35	1	12	12	3	1				54					2				27	4	5	12	8	1
5AM8	5	39	30	5	4	12	2	1	5ES8	5	8	30					1	5T4	5	33	16					1
			30	5	4	12	8	1				30					2				16					2
5AN8	5	13	62					1	5EU8	5	39	32	5	4	12	7	1	5T8	5	17	90					1
			61					2				32	5	4	12	2	1				63					2
5AQ5	5	3	77					1	5EW6	5	1	77					1	5U4	5	33	16					1
5AR4	5	33	10					1	5FG7	5	14	68					1	5U8	5	11	79					2
			10					2				56					2				55					2
5AS4	5	33	17					1	5FV8	5	14	65					1	5U9	5	42	28	5	6	12	3	1
			17					2				54					2				32	5	6	12	10	1
5AS8	5	39	31	5	4	12	2	1	5CH8	5	11	68					1	5V3	5	33	15					1
			32	5	4	12	8	1				56					2				15					2
5AT8	5	14	77					1	5GH8A	5	11	68					1	5V4	5	33	12					1
								2				56					2				12					2
5FU4	5	33	16					1	5GJ7	5	22	62					1	5V6	5	29	79					1
			18					2				78					2	5V9	5	42	31	5	6	12	3	1
5AV8	5	39	40	4	5	6	2	1	5GM6	5	1	64					1				30	5	6	12	8	1
			34	4	5	1	8	1				80					1				32					1
5AW4	5	33	17					1	5GS7	5	14	53					2	5W4	5	33	32					2
			17					2				53					1				32					1
5AZ4	5	37	53	8	2	12	4	1	5GX6	5	1	85					1	5X4	5	38	47	8	7	12	9	1
			53	8	2	12	8	1	5GX7	5	22	76					1				47	8	7	12	5	1
			30	4	5	6	2	1				73					2	5X8	5	12	73					1
								1	5HA7	5	36	35	1	12	5	9	1				61					2
			28	4	5	1	8	1				35	1	12	5	11	1	5X9	5	42	30	5	6	12	3	1
			*33	1	3	8	5	1	5HB7	5	22	75					1				30	5	6	12	10	1
			*33	1	3	8	8	1				75					2	5Y3	5	33	32					1
*Normally shows short position 2-3-8-9.												75									32					2
*Normally shows short position 2-3-5-6.																										

\*Normal Shorts refer to position of "0" Switch.

3 4HG8-5Y3

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 4

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
5Y4	5	38	52	8	7	12	3	1	6AL5	6	41	33	3	4	12	2	1	6AX7	6	8	*85					1
5Z4	5	33	12	8	7	12	5	1	6AL9	6	36	28	1	12	12	5	1	*Tube good if it reads 22 or more.								2
5Z10	5	33	16					2	6AL11	6	36	31	1	12	12	3	1	6AX8	6	11	73					1
6A8	6	38	16					2	6AM4	6	39	*96	1	12	12	8	1	6AY3	6	44	27	5	4	7	2	1
6AB4	6	2	83	7	2	1	5	1	*Normally shows short position 3-4-6-9.								6AY3B	6	44	27	5	4	7	2	1	
6AB7	6	30	74					1	6AM5	6	41	34	4	3	12	1	1	6AY11	6	36	30	1	12	12	5	1
6AB8	6	39	37	5	4	12	9	1	6AM6	6	41	30	4	3	12	1	1				30	1	12	12	3	1
6AB9	6	42	44	5	4	12	2	1	6AM8	6	39	30	5	4	12	2	1	6AZ8	6	39	30	1	12	12	10	1
6AC5	6	38	79	5	6	10	2	1	6AN4	6	41	*30	5	4	12	8	1				32	5	4	12	8	1
6AC7	6	30	79	5	6	4	8	1	*May show short position 1-7.								6B4	6	38	35	7	2	12	5	1	
6AC9	6	36	40	7	2	12	5	1	6AN5	6	1	26					1	6B6	6	38	37	7	2	12	10	1
6AC10	6	36	60					1	6AN6	6	41	52	7	1	12	2	1				58	7	2	12	4	1
6AD7	6	38	45	1	12	3	2	1				52	7	1	12	3	1	688	6	38	58	7	2	12	5	1
6AQ10	6	36	35	1	12	2	3	1	6AN8	6	13	52	7	1	12	4	1				58	7	2	12	10	1
6AF3	6	15	32	1	12	12	11	1				52	7	1	12	5	1				65	7	2	12	4	1
6AF4	6	41	54	7	2	12	5	1	6AQ4	6	41	*29	4	3	6	1	1	6B10	6	36	34	1	12	12	9	1
6AF9	6	42	62	7	2	12	1	1	*Normally shows short position 2-5.											34	1	12	12	5	1	
6AF11	6	36	30	1	12	12	3	1	6AQ5	6	3	77					1				34	1	12	12	10	1
6AG5	6	1	33	1	12	12	8	1	6AQ6	6	6	89					1	6B31	8	41	33	3	4	12	2	1
6AG7	6	30						1	6AQ7	6	38	80					2	6B32	6	41	33	3	4	12	7	1
6AG9	6	36						1				45	8	7	12	4	1				33	3	4	12	2	1
6AG11	6	36						1	6AQ8	6	8	58	8	7	12	1	1	6BA3	6	44	33	4	5	7	2	1
6AH4	6	38	31	1	12	12	11	1				58	8	7	12	3	1	6BA6	6	1	78					1
6AH6	6	1	31	1	12	12	6	1	6AR5	6	3	70					2	6BA7	6	39	33	5	4	12	2	1
6AH7	6	38	35	1	12	12	3	1	6AR6	6	38	91					1	6BA8	6	12	53					1
6AH9	6	36	80					1	6AR8	6	39	33	8	6	12	7	1				59					2
6AJ4	6	39	38					1	6AR11	6	36	28	5	4	12	8	1	6BA11	6	36	29	1	12	12	4	1
6AJ5	6	41	30	1	12	12	5	1				28	1	12	12	5	1				37	1	12	12	9	1
6AJ7	6	30	28	1	12	12	8	1	6AS5	6	4	28					1	6B-B14	6	44	*33	4				1
6AJ8	6	39	28	1	12	12	5	1	6AS6	6	1	55					1	*Normally shows short position 3-6-7-8.								1
6AJ9	6	42	33	1	12	12	10	1	6AS7	6	38	77	8	7	12	1	1	6BC4	6	40	30	5	4	3	7	1
6AK5	6	1						1	6AS8	6	39	35	8	7	12	4	1	6BC5	6	1	74					1
6AK6	6	1						1	6AS11	6	36	35	8	7	12	4	1	6BC7	6	39	32	5	4	12	2	1
6AK7	6	30						1				31	5	4	12	2	1				32	5	4	12	6	1
6AK8	6	17						1	6AT6	6	6	32	5	4	12	6	1	6BC8	6	8	53	5	4	12	8	1
6AK9	6	36	48	8	7	12	1	1	6AT8	6	14	32	1	12	12	6	1	6BC32	6	6	53					2
6AK10	6	36	48	8	7	12	5	1				32	1	12	12	9	1				91					1
6AL3*	6	40	30	1	12	5	2	1	6AU4	6	34	85					1	6B05	6	38	78					2
								1	6AU5	6	28	71					1	6B06	6	1	29	7	2	12	1	1
								1	6AU6	6	1	77					1	6B011	6	36	85					1
								1	6AU7	6	8	55					2				26	1	12	12	11	1
								2	6AU8	6	12	10					1				31	1	12	12	3	1
								1				75					1	6BE3	6	36	31	1	12	12	8	1
								1				56					1	6BE6	6	1	26	1	12	4	10	1
								2				72					2	6BE7	6	39	91					1
								1				78					1	6BE8	6	14	33	5	4	3	7	1
								1				62					1				72					1
								1				91					1	6BF5	6	3	55					2
								2				78					1	6BF6	6	6	40					1
								1				30	1	12	12	7	1				85					1
								1				30	1	12	12	9	1	6BF8	6	39	25	4	5	12	1	1
								1	6AW8	6	12	44					1				25	4	5	12	2	1
								2				78					1				25	4	5	12	3	1
								1	6AX2	6	24	88					1				25	4	5	12	7	1
								1									1				25	4	5	12	8	1
								1	6AX3	6	36	30	1	12	10	4	1	6BF11	6	36	25	1	12	12	3	1
								1	6AX4	6	34	13					1				25	1	12	12	6	1
								1	6AX5	6	38	44	7	2	1	5	1	6BG6	6	26	66					1
								1				44	7	2	1	5	1	6BH3	6	44	27	5	4	7	2	1
								1				44	7	2	1	5	1	6BH3A	6	44	27	5	4	7	2	1

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

4 5Y4-6BH3A



# B & K DYNA-JET MODEL 707 TUBE CHART

Page 5

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
6BH6	6	1	89					1	6BW6	6	39	42	4	5	1	2	1	6CJ3	6	44	25	4	5	7	2	1	
6BH8	6	12	59					1	6BW7	6	9	75					1	6CJ6	6	39	*32	5	4	7	2	1	
			54					2	6BW8	6	39	33	5	4	2	6	1	*Normally shows short position 1-6-9.									
6BH11	6	36	27	1	12	12	4	1				34	5	4	7	1	1	6CK3	6	44	25	4	5	7	2	1	
			27	1	12	12	8	1				34	5	4	7	3	1	6CK4	6	38	34	7	2	1	3	1	
									6BW11	6	36	30	1	12	12	3	1	6CK6	6	39	30	5	4	12	2	1	
6BJ3	6	36	26	1	12	4	10	1				30	1	12	12	11	1	6CL3	6	44	27	4	5	2	7	1	
6BJ6	6	1	81					1	6BX6	6	9	76					1	6CL5	6	26	54					1	
6BJ7	6	39	33	5	4	12	2	1	6BX7	6	25	55					1	6CL6	6	39	*32	5	4	2	9	1	
			33	5	4	12	6	1				55					2	*Normally shows short position 3-8.									
									6BX8	6	39	33	5	4	12	2	1	6CL8	6	14	69					1	
6BJ8	6	39	38	5	4	12	8	1				33	5	4	12	7	1								2		
			34	5	4	12	1	1	6BY5	5	38	38	7	2	12	4	1	6CM3	6	44	30	4	5	2	7	1	
			34	5	4	12	6	1				38	7	2	12	5	1	6CM4	6	40	29	4	5	3	6	1	
6BK4A	6	38	78	7	2	6	5	1	6BY6	6	1	93					1	6CM5	6	27	58					1	
6BK4A	6	38	78	7	2	6	5	1	6BY7	6	9	62					1	6CM6	6	16	64					1	
6BK4B	6	38	78	7	2	6	5	1	6BY8	6	39	34	5	4	12	1	1	6CM7	6	19	80					1	
6BK5	6	10	53					1				34	5	4	12	6	1								2		
6BK6	6	6	86					1	6BY11	6	36	32	1	12	12	3	1	6CM8	6	39	33	5	4	12	2	1	
			70					2				32	1	12	12	8	1								1		
6BK7	6	8	55					1	6BZ3	6	36	30	1	12	4	10	1	6CN6	6	29	*62					1	
			55					2	6BZ6	6	1	61					1	*For Plate Cap Use Jack Next to Socket 26.									
6BK11	6	36	35	1	12	12	7	1	6BZ7	6	8	53					1	6CN7	6	18	94					1	
			35	1	12	12	9	1				53					2								2		
			35	1	12	12	11	1	6BZ8	6	8	55					1	6C04	6	34	11					1	
6BL4	6	34	10					1				55					2	6C06	6	41	35	4	3	12	1	1	
6BL7	6	25	57					1	6C4	6	41	41	4	3	1	8	1	6CQ8	6	11	72					1	
			57					2	6C5	6	29	99					1								2		
6BL8	6	11	66					1	6C8	6	38	48	7	2	12	5	1	6CR6	6	41	39	4	3	12	7	1	
			55					2				48	7	2	12	10	1								1		
6BM8	6	39	33	5	4	12	3	1	6C9	6	39	28	5	4	6	1	1	6CR8	6	39	*32	5	4	12	2	1	
			39	5	4	12	1	1				28	5	4	10	7	1								1		
6BN4	6	41	*33	4	3	2	7	1	6C10	6	36	42	1	12	12	7	1	*Normally shows short position 8.									
*Normally shows short position 1-6.												42	1	12	12	9	1	6CS6	6	1	94					1	
6BN5	6	39	*39	5	4	1	2	1				42	1	12	12	11	1	6CS7	6	20	96					1	
*Normally shows short position 6-8.									6C16	6	11	66					1								2		
6BN6	6	7	75					1				55					2	6CT3	6	39	32	4	5	6	2	1	
6BN8	6	39	35	5	4	12	8	1	6C18	6	39	30	4	5	8	7	1	6CU5	6	4	47					1	
			35	5	4	12	1	1				33	4	5	8	9	1	6CU6	6	27	69					1	
			35	5	4	12	8	1	6C31	6	41	*80	4	3	1	7	1	6CU8	6	39	32	5	4	1	7	1	
6BN11	6	36	29	1	12	12	3	1	*Normally shows short position 5-6.																1		
			29	1	12	12	7	1	6CA4	6	39	34	5	4	12	1	1	6CW4	6	43	*87	10	12	12	2	1	
6B05	6	23	68					1				34	5	4	12	7	1	*For grid emission turn D switch to position 4.									
6B06	6	27	69					1	6CA5	6	4	55					1	6CW5	6	23	58					1	
6B07	6	8	54					1				55					1	6CW7	6	39	33	5	4	7	2	1	
								2	6CA7	6	29	53					1								1		
6BR3	6	15	10					1	6CA11	6	36	35	1	12	8	3	1	6CX8	6	12	45					1	
6BR8	6	14	72					1				33	1	12	8	6	1								2		
			55					2				33	1	12	7	8	1	6CY5	6	1	54					1	
6BS3	8	44	27	4	5	2	7	1	6C85	6	26	43					1	6CY7	6	39	31	5	4	2	3	1	
6BS3A	6	44	27	4	5	2	7	1	6CB6	6	1	64					1								1		
6BS8	8	8	54					1	6CCYZ	6	39	29	9	1	12	3	1	6CZ5	6	16	60					1	
			54					2				29	9	1	12	7	1	6D1	6	41	43	4	3	1	6	1	
6BT6	6	6	85					1	6CC31	6	2	60					1	6D2	6	41	33	3	4	12	2	1	
			78					2				60					2								1		
6BT8	6	39	33	5	4	12	8	1	6CD3	6	36	*27	1	12	4	10	1	6D4	6	41	43	4	3	12	1	1	
			54	5	4	12	1	1	*Some tubes may show short position 5-6-8-9.										6D8	6	38	43	7	2	12	5	1
			54	5	4	12	2	1	6C06	6	26	53					1	6D10	6	36	32	1	12	12	7	1	
6BU6	6	6	85					1	6CE3	6	36	25	1	12	4	10	1									1	
			80					2	6CE5	6	1	62					1									1	
6BU8	6	21	92					1	6CF6	6	1	60					1	6D44	6	34	11					1	
			92					2	6CG3	6	36	30	1	12	4	10	1	6DA6	6	9	80					1	
6BV8	6	39	31	5	4	12	2	1	6CG7	6	8	76					1	6DB5	6	16	30					1	
			33	5	4	12	6	1				78					2	6DB6	6	1	87					1	
			33	5	4	12	9	1	6CG8	6	14	73					1	6DC6	6	1	67					1	
6BV11	6	36	30	1	12	12	6	1				57					2	6DC8	6	39	33	5	4	12	2	1	
			30	1	12	12	7	1	6CH3	6	44	29	4	5	7	2	1									1	
6BW3	6	36	28	1	12	4	10	1	6CH6	6	9	55					1									1	
6BW4	6	39	50	5	4	12	1	1	6CH8	6	39	33	5	4	12	7	1	6DE4	6	34	13					1	
			50	5	4	12	7	1				36	5	4	12	8	1	6DE6	6	1	61					1	

\*Normal Shorts refer to position of "0" Switch.

▲ Use TC-75 Adapter

5 6BH6-6DE6

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6DE7	6	20	81					1	6ED4	6	44	*52	4	5	12	8	1	6FE5	6	29	37					1
			90					2										6FG5	6	41	31	4	3	2	1	1
6DG6	6	29	38					1	6EF4*	6	36	76	1	12	6	4	1	6FG7	6	14	68					1
6DJ8	6	39	31	5	4	12	2	1	*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.									6FH5	6	41	33	4	3	1	2	1
			31	5	4	12	7	1										6FH8	6	39	32	5	4	12	6	1
6DK3	6	44	31	4	5	2	7	1										6FI7	6	36	36	1	12	12	3	1
6DK6	6	1	61					1	6EH4*	6	36	80	1	12	6	4	1				44	1	12	12	10	1
6DL3	6	44	29	4	5	7	2	1	*Insert a 2.7K, 1w., 5% resistor from pin hole #4 to #6 of socket #37. Remove resistor after test is completed.									6FM7	6	36	25	1	12	3	8	1
6DL4	6	39	*85	4	5	7	8	1													36	1	12	3	10	1
*Normally shows short position 1-3-6-9.																		6FM8	6	39	47	5	4	12	8	1
6DL5	6	3	88					1													34	5	4	12	2	1
6DM4	6	34	11					1													34	5	4	12	6	1
6DN3	6	44	31	4	5	2	7	1	6EH5	6	4	57					1	6FQ5	6	41	33	4	3	1	2	1
6DN6	6	26	47					1	6EH7	6	9	40					1	6FQ5A	6	41	31	4	3	1	2	1
6DN7	6	25	56					1	6EH8	6	12	71					1	6FQ7	6	8	68					1
			77					2									2				68					2
6DQ3	6	36	30	1	12	4	10	1	6EJ4*	Use 6EF4 settings. May show short position 2-9-11.								6FR7	6	39	24	4	5	2	9	1
6DQ4	6	34	11					1	6EJ7	6	9	58					1				32	4	5	2	7	1
6DQ5	6	26	55					1	6EL4	6	38	78	7	2	6	6	1	6FS5	6	1	99					1
6DQ6	6	27	65					1	6EM5	6	16	53					1	6FV6	6	1	54					1
6DQ6B	6	27	62					1	6EM7	6	38	32	8	7	12	1	1	6FV8	6	14	65					1
6DR4	6	41	43	4	3	1	6	1				45	8	7	12	4	1				64				2	
6DR7	6	39	32	4	5	2	3	1	6EN4	6	38	*40	7	2	6	5	1	6FW5	6	28	57					1
			40	4	5	2	7	1	*Normally shows short position 1-3-4-8.									6FW8	6	8	30					1
6DR8	6	39	31	5	4	12	2	1													30					2
			62	5	4	12	7	1	6EQ7	6	39	34	5	4	12	2	1	6FY5	6	41	33	4	3	1	2	1
			62	5	4	12	8	1				71	5	4	12	8	1	6FY7	6	36	25	1	12	12	3	1
6DS4	6	43	*87	10	12	12	2	1	6ER5	6	41	33	4	3	1	2	1				42	1	12	12	10	1
*For grid emission turn 0 switch to position 4.									6ES5	6	41	33	4	3	1	2	1	6FY8	6	39	30	4	5	12	3	1
6DS5	6	3	76					1	6ES8	6	8	30					2	6G6	6	29	94					1
6DS8	6	39	30	5	4	12	2	1				30					1	6G11	6	36	33	1	12	12	3	1
			34	5	4	12	9	1	6ET6	6	41	30	4	3	12	1	1				31	1	12	12	8	1
6DT3	6	36	31	1	12	4	10	1	6ET7	6	39	30	5	4	12	7	1	6G-B3A	6	27	65					1
6DT4	6	34	11					1				70	5	4	12	3	1	6GB5	6	44	*25	4	5	2	1	1
6DT5	6	16	45					1				35	2	1	12	5	1	*Normally shows short position 3-6-7-8.								
6DT6	6	1	91					1	6EU7	6	39	35	2	1	12	5	1	6G-86	6	27	64					1
6DT8	6	8	71					2				35	2	1	12	8	1	6G-B7	6	27	58					1
6DU3	6	36	30	1	12	4	10	1	6EU8	6	39	32	5	4	12	7	1	6GB9	6	27	64					1
6DW4	6	44	27	4	5	2	7	1				32	5	4	12	2	1	6GC5	6	16	26					1
6DW5	6	16	30					1	6EV5	6	1	57					1	6GC6	6	26	52					1
6DX4	6	41	*62	3	4	1	7	1	6EY7	6	8	78					2	6GD7	6	14	74					1
								1				78					1				63					2
6DX8	6	39	26	4	5	12	8	1	6EW6	6	1	77					1	6GE5	6	36	*24	1	12	11	3	1
			26	4	5	12	1	1	6EW7	6	20	87					1	*Normally shows short position 4-10.								
6DY4	6	41	*24	4	3	2	6	1				92					2	6GE8	6	39	33	5	4	12	6	1
								1	6EX6	6	26	42					1				33	5	4	12	9	1
6DY5	6	23	68					1	6FY6	6	29	65					1	6GF5	6	36	*24	1	12	11	9	1
6DZ4	6	41	*31	3	4	6	2	1	6EZ5	6	29	65					1	*Normally shows short position 4-10.								
								1	6EZ8	6	39	33	5	4	12	2	1	6GF7	6	44	27	4	5	12	2	1
6DZ7	6	38	40	7	2	12	1	1				39	5	4	12	7	1	6GF7A	6	44	38	4	5	12	9	1
			40	7	2	12	5	1	6F5	6	38	40	7	2	1	10	1				38	4	5	12	2	1
6DZ8	6	39	27	4	5	8	3	1	6F6	6	29	91					1				38	4	5	12	9	1
			30	4	5	2	1	1	6F8	6	38	45	7	2	12	5	1				38	4	5	12	9	1
6E8	6	38	45	7	2	1	5	1				45	7	2	12	10	1	6GH8	6	11	68					1
6EA4*	6	36	80	1	12	6	4	1	6F10	6	30	60					1	6GH8A	6	11	68					1
*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.									6F21	6	41	35	4	3	12	1	1				56					2
*Normally shows short position 2-5-9-11.									6F22	6	39	40	5	4	2	9	1	6GJ5	6	35	65					1
6EA5	6	1	80					1	6F29	6	9	40					1	6GJ5A	6	35	65					1
6EA7	6	38	35	8	7	12	1	1	6F31	6	1	78					1	6GJ7	8	22	62					1
			39	8	7	12	4	1	6F33	6	1	77					1				78				2	
6EA8	6	11	71					1	6F36	6	1	58					1	6GJ8	8	11	70					1
			56					2	6F40	6	39	39	5	4	2	9	1				53					2
6EB5	6	41	53	3	4	12	2	1	6FA7	6	39	33	5	4	12	7	1	6GK5	6	41	25	4	3	1	2	1
			53	3	4	12	7	1				65	5	4	12	3	1	6GK6	6	9	40					1
6EB8	6	12	35					1	6FG7	6	39	29	4	5	7	2	1	6G-K17	6	34	12					1
			99					2				29	4	5	7	6	1	6GL7	6	25	54					1
6EC4W	6	38	32	7	8	2	5	1	6FD6	6	41	26	3	4	2	1	1				98					2
								1	6FD7	6	39	25	4	5	2	3	1									1
								1				32	4	5	2	7	1									2

◆Use TC-80 Adapter

\*Normal Shorts refer to position of "TV" Switch.

▲Use TC-75 Adapter.

■Use TC-628 Adapter

6 6DE7-6GL7



TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6GM5	6 39	*26	4 5 2 8	1				
*May show short position 3-8.								
6GM6	6 1	64						1
6GM8	6 39	33	5 4 12 2	1				
		33	5 4 12 7	1				
6GN7	6 9	21						1
6GN8	6 12	36						1
		98						2
6GQ7	6 39	24	4 5 3 2	1				
		24	4 5 3 8	1				
		24	4 5 3 8	1				
6GS7	8 14	80						1
		53						2
6GS8	6 21	95						1
		95						2
6GT5	6 35	63						1
6GT5A	6 35	63						1
6GU5	6 41	27	3 4 2 1	1				
6GU7	6 8	56						1
		56						2
6GV5	6 36	*26	1 12 5 9	1				
*Normally shows short position 3-4-7-10-11.								
6GV7	8 39	30	4 5 6 7	1				
		33	4 5 8 9	1				
6GV8	6 39	25	4 5 12 9	1				
		25	4 5 12 2	1				
6GW5	6 41	29	3 4 8 2	1				
6GW6	6 27	62						1
6GW8	6 39	25	4 5 2 8	1				
		35	4 5 7 1	1				
6GX6	6 1	85						1
6GX7	6 22	76						1
		73						2
6GY5	6 36	*25	1 12 5 9	1				
*Normally shows short position 3-4-7-10-11.								
6GY6	6 1	82						1
6GY8	6 39	*32	5 4 12 1	1				
		*32	5 4 12 3	1				
		*94	5 4 12 6	1				
*Normally shows short position 4.								
6GZ5	6 41	30	3 4 2 5	1				
6H6	6 38	48	7 2 1 3	1				
		48	7 2 1 5	1				
6H31	6 1	91						1
6HA5	6 5	56						1
6HA6	6 9	23						1
6HB5	6 36	*25	1 12 11 3	1				
*Normally shows short position 4-10.								
6HB6	6 9	20						1
6HB7	6 22	75						1
		75						2
6HC8	6 39	36	5 4 12 3	1				
		38	5 4 12 1	1				
6HO5	6 36	*27	1 12 3 11	1				
*Normally shows short position 4-5-9-10.								
6HO7	6 39	30	4 5 1 2	1				
		30	4 5 1 9	1				
6HE5	6 36	*32	1 12 9 2	1				
*Normally shows short position 3-4-10-11.								
6HE7	6 36	27	1 12 10 2	1				
		27	1 12 10 9	1				
6HF5	6 36	*25	1 12 9 5	1				
*Normally shows short position 3-4-6-8-10-11.								
6HF8	6 12	27						1
		80						2
6HG5	6 3	85						1
6HG8	6 39	25	4 5 3 2	1				
		25	4 5 1 6	1				
6HU5	6 36	*27	1 12 3 11	1				
*Normally shows short position 4-5-9-10.								

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6HJ7	6 39	*78	4 5 1 7	1				
		30	4 5 1 9	1				
*For grid emission turn D switch to position 2.								
6HJ8	6 39	29	5 4 12 2	1				
		31	5 4 12 8	1				
6HK5	6 5	56						1
6HL5	6 39	30	4 5 1 2	1				
6HL8	6 11	60						1
		60						2
6HM5	8 5	57						1
6HM6	6 9	68						1
6HQ5	6 5	55						1
6HR5	6 3	77						1
6HR6	6 1	71						1
6HS5	6 36	*30	1 12 11 2	1				
*Normally shows short position 3-10.								
6HC6	6 1	66						1
6HS6	8 21	99						1
		99						2
6HT5	6 36	*52	1 12 2 6	1				
*May show short position 4-7-9-11.								
6HT6	6 9	60						1
6HU6	6 39	52	4 5 2 1	1				
6HU8	6 39	29	4 5 12 2	1				
		29	4 5 12 6	1				
6HV5	6 36	*33	1 12 2 11	1				
*Normally shows short position 3-10.								
6HW8	6 39	32	4 5 12 8	1				
6HZ5	6 36	*30	1 12 2 11	1				
*Normally shows short position 3-10.								
6HZ6	6 1	83						1
6HZ8	6 12	28						1
		75						2
6JA	6 41	*85	4 3 1 7	1				
*Normally shows short position 5-6.								
6J5	6 29	93						1
6J6	6 2	60						2
		60						2
6J7	6 38	50	7 2 1 10	1				
6J9	6 39	26	4 5 12 2	1				
		26	4 5 12 9	1				
		26	4 5 12 7	1				
6J10	6 36	96	1 12 12 6	1				
		28	1 12 12 11	1				
6J11	6 36	22	1 12 12 5	1				
		22	1 12 12 11	1				
6JA5	6 36	*33	1 12 9 2	1				
*Normally shows short position 3-4-10-11.								
6JA8	6 39	25	4 5 12 7	1				
		95	4 5 12 3	1				
6JB5	6 36	*35	1 12 9 2	1				
*Normally shows short position 3-4-10-11.								
6JB6	6 35	62						1
6JB6A	6 35	62						1
6JC5	6 36	*32	1 12 9 2	1				
*Normally shows short position 3-4-10-11.								
6JC6	6 9	65						1
6JC6A	6 9	59						1
6JC8	6 39	24	4 5 1 2	1				
		24	4 5 1 8	1				
6JO5	6 36	*30	1 12 2 11	1				
*Normally shows short position 3-10.								
6JD6	6 9	61						1
6JE6A	6 35	59						1
6JE6B	6 35	59						1
6JEGG	6 35	52						1
6JE8	6 12	56						1
		78						2
6JF6	6 44	*26	4 5 2 6	1				
*Normally shows short position 1-7.								

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6JG5	6 12	29						1
6JG6	6 35	56						1
6JG6A	6 35	56						1
6JH5	6 36	*32	1 12 11 2	1				
*Normally shows short position 3-7-8-10.								
6JH6	6 1	64						1
6JH8	6 39	26	4 5 12 6	1				
6JK5	6 36	*32	1 12 11 2	1				
*Normally shows short position 3-7-8-10.								
6JK6	6 1	61						1
6JK8	6 8	54						1
		55						2
6JL6	6 1	23						1
6JL8	6 12	40						1
		70						2
6JM6	6 36	26	1 12 4 5	1				
6JN6	6 36	27	1 12 4 11	1				
6JN8	6 14	67						1
		53						2
6JQ6	6 39	*34	4 5 8 7	1				
		*57	4 5 8 6	1				
*May show short position 2-3.								
6JR6	6 35	50						1
6JS6	6 36	*29	1 12 9 5	1				
*Normally shows short position 3-4-10-11.								
6JT6	6 35	65						1
6JT6A	6 35	65						1
6JT8	6 12	20						1
		*89						2
*Tube good if reads 60 or more.								
6JU6	6 35	55						1
6JU8	6 39	*32	4 5 2 1	1				
		*32	4 5 6 7	1				
*Normally shows short position 6.								
**Normally shows short position 2.								
6JUA	6 39	*32	4 5 2 1	1				
		*32	4 5 8 7	1				
*Normally shows short position 8.								
**Normally shows short position 2.								
6JV8	6 12	55						1
		85						2
6JW8	6 11	80						1
		85						2
6JX8	6 22	88						1
		93						2
6JY8	6 12	40						1
		55						2
6JZ6	6 36	*31	1 12 9 5	1				
*Some tubes may show short position 3-4-10-11.								
6JZ8	6 36	29	1 12 6 7	1				
		40	1 12 6 10	1				
6K6	8 29	92						1
6K7	8 38	52	7 2 1 10	1				
6K8	6 38	35	7 2 1 5	1				
6K11	6 36	38	1 12 12 7	1				
		38	1 12 12 9	1				
		38	1 12 12 11	1				
6KA8	6 39	26	4 5 12 6	1				
		33	4 5 12 2	1				
6KQ6	6 36	*26	1 12 9 5	1				
*Normally shows short position 3-4-10-11.								
6KQ8	6 11	68						1
		52						2
6KE8	6 11	88						1
		53						2
6KF8	6 21	92						1
		92						2
6KGG	6 44	*26	4 5 1 8	1				
*Normally shows short position 2-3-6-7.								

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter.

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 8

TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.			
6KL8	6	39	31	4	5	12	2	1	6LQ6	6	35	52					1	6MV8	6	12	63					1			
			70	4	5	12	8	1	6LQ8	6	12	31					1								2				
6KM6	6	35	53					1				50					2	6MX8	6	44	27	4	5	12	2	1			
6KM8	6	39	31	4	5	12	7	1	6LR6	6	36	*32	1	12	9	5	1					4	5	12	9	1			
			75	4	5	12	3	1	*May show short position 3-4-7-10-11.									6MY8	6	36	27	1	12	6	7	1			
6KN6	6	36	*30	1	12	9	5	1	6LR8	6	44	31	4	5	12	2	1					27	1	12	6	10	1		
*Normally shows short position 3-4-10-11.												31	4	5	12	9	1	6N3	6	39	29	4	5	6	9	1			
6KN8	6	39	86	4	5	12	1	1	6LT8	6	39	27	4	5	7	9	1					47	7	2	1	4	1		
			90	4	5	12	6	1				32	4	5	1	6	1	6N7	6	38	47	7	2	1	5	1			
6KR8	6	12	22					1				32	4	5	1	8	1	6N8	6	39	37	5	4	12	2	1			
								2	6LU6	6	1	52					1					64	5	4	12	7	1		
6KR8A	6	12	22					1	6LU8	6	36	27	1	12	6	7	1					64	5	4	12	8	1		
			59					2				27	1	12	6	10	1	6NK7GT	6	30	84					1			
6KS6	6	7	83					1	6LV6	6	36	*31	1	12	5	9	1	6P5	6	29	93					1			
6KS8	6	12	33					1	*May show short position 3-4-7-10-11.									6P15	6	23	68					1			
			84					2	6LW6	6	38	*31	7	8	1	5	1	6Q7	6	38	40	7	2	1	10	1			
6K76	6	9	52					1	*Normally shows short position 2-6																				1
6KT8	6	12	67					1	6LX8	6	11	80					1					63	7	2	1	4	1		
			91					2				85					2	6Q8	6	38	45	7	2	1	5	1			
6KU8	6	39	22	4	5	12	7	1	6LY8	6	12	21					1	6Q11	6	36	38	1	12	12	7	1			
								1									2					38	1	12	12	9	1		
			60	4	5	12	2	1	*Tube good if it reads 28 or more.																			1	
			60	4	5	12	3	1	6LZ6	6	35	53					1	6R3	6	39	33	5	4	2	9	1			
6KY6	6	44	30	4	5	1	6	1	6M11	6	36	25	1	12	12	2	1	6R4	6	39	30	4	5	12	1	1			
6KY8	6	12	22					1				25	1	12	12	5	1	6R7	6	38	52	7	2	1	10	1			
			82					2									1									1			
6KW6	6	44	30	4	5	1	6	1	6MA6	6	38	*58	3	8	2	6	1					63	7	2	1	4	1		
6KY6	6	9	20					1	*Tube good if it reads 40 or more.									6R8	6	17	86				1				
6KY8	6	44	27	4	5	12	2	1	*No short test.																1				
6KY8A	6	44	27	4	5	12	2	1	6MB6	6	36	*32	1	12	9	5	1	6RA6	6	40	34	4	5	9	7	1			
			39	4	5	12	9	1	*Normally shows short position 3-4-10-11.									6R-A9	6	39	30	4	5	7	2	1			
6KZ8	6	39	26	4	5	12	2	1	6MB8	6	14	84					1	6R-B11	6	39	32	4	5	6	3	1			
			26	4	5	12	9	1				61				2	6R-HH2	6	8	53					1				
6L5	6	38	53	7	2	6	5	1	6MC6	6	35	46					1					53				2			
6L6	6	29	63					1	6MD8	6	44	35	4	5	12	8	1	6R-HH8	4	39	86	4	5	12	1	1			
6L7	6	38	44	7	2	1	10	1				35	4	5	12	8	1					90	4	5	12	6	1		
6L10	6	30	38					1				35	4	5	12	8	1	6R-K19	6	15	10					1			
6L12	6	8	70					2	6ME6	6	35	53					1	6R-P15	6	39	35	4	5	1	2	1			
			70					2	6ME8	6	39	30	4	5	12	6	1	6R-P22	6	39	*32	4	5	2	9	1			
6L41	6	39	33	5	4	8	9	1	6MF8	6	36	35	1	12	6	7	1	*Normally shows short position 3-8.											
6L43	6	39	*32	5	4	2	9	1				34	1	12	6	10	1	6S2	6	24	35					1			
*Normally shows short position 3-8.									6MG8	8	11	80					1	6S4	6	16	58					1			
6LB6	6	36	*30	1	12	9	5	1				59					2	6S7	6	38	47	7	2	1	10	1			
*Normally shows short position 3-4-10-11.									6MH1	6	41	*85	4	3	1	7	1	6S8	6	38	45	8	7	5	10	1			
6LB8	6	12	21					1	*Normally shows short position 5-6																				1
			71					2	6MH6	6	36	*31	1	12	5	9	1					62	8	7	5	4	1		
6LC6A	6	38	78	7	2	12	5	1	*May show short position 3-4-7-10-11									6SA7	6	38	37	7	2	1	5	1			
6LC8	6	39	24	4	5	3	6	1	6M-HH3	6	2	56					1	6SB7Y	6	38	34	7	2	1	5	1			
			24	4	5	6	2	1				56					2	6SC7	6	38	48	8	7	1	3	1			
6LD6	6	9	51					1	6MJ6	6	35	52					1									1			
6LD12	6	16	90					1	6MJ8	6	36	35	1	12	7	8	1					48	8	7	1	4	1		
			63					2				35	1	12	7	10	1	6S07	6	30	69					1			
6LE8	6	39	29	4	5	12	9	1				35	1	12	7	11	1	6SF5	6	38	41	8	7	1	3	1			
6LF6	6	36	*31	1	12	5	9	1	6MK8	6	21	98					2	6SF7	6	38	48	8	7	1	2	1			
*May show short position 3-4-7-10-11.												98					1					69	8	7	1	5	1		
6LF8	6	12	55					1	6M-L4	6	41	*24	4	3	2	6	1	6SG7	6	30	77					1			
			95					2	*Normally shows short position 1-7.									6SN7	6	30	77					1			
6LG6	6	36	*32	1	12	9	5	1	6ML8	6	39	34	4	5	12	6	1	6SJ7	6	30	83					1			
*May show short position 2-3-4-7-10-11.												4	5	12	8	1	6SK7	6	30	84					1				
6LH6A	6	38	78	7	2	12	5	1				4	5	12	9	1	6SL7	6	25	*85					1				
6LJ6A	6	38	78	2	7	12	5	1	6MNB	6	36	33	1	12	7	8	1	*85											
			95					2				33	1	12	7	10	1	*Tube good if it reads 22 or more.											
6LJ8	6	14	85					1				33	1	12	7	11	1	6SN7	6	25	78					1			
			60					2	6M-P17	6	3	90					1					78				2			
6LM8	6	11	68					1	6M-P18	6	41	34	3	4	7	1	1	6S07	6	38	42	8	7	1	2	1			
								2	6MP20	6	1	43					1					71	8	7	1	4	1		
6LN8	6	11	66					1	6MQ8	6	11	65					1					71	8	7	1	5	1		
			55					2				66					2					68	8	7	1	2	1		
6LP12	6	39	33	5	4	12	3	1	6MU8	6	11	42					1	6SR7	6	38	46	8	7	1	2	1			
			39	5	4	12	1	1									1					68	8	7	1	5	1		

◆Use TC-80 Adapter

\*Normal Shorts refer to position of "D" Switch.

▲Use TC-70 Adapter.

8 6KL8-6SR7



# B & K DYNA-JET MODEL 707 TUBE CHART Page 9

TUBE TYPE	Heater	Socket	Sens.-tivity	A	B	C	D	Tot. Pos.	TUBE TYPE	Heater	Socket	Sens.-tivity	A	B	C	D	Tot. Pos.	TUBE TYPE	Heater	Socket	Sens.-tivity	A	B	C	D	Tot. Pos.
6SS7	6	38	46	7	2	1	4	1	7AF7	6	37	41	8	1	12	4	1	7Ab	6	37	35	8	1	12	3	1
6ST7	6	38	52	8	7	1	2	1										7X7	6	37	35	8	1	12	6	1
			72	8	7	1	4	1	7AG7	6	37	32	8	1	12	6	1				43	8	1	12	3	1
			72	8	7	1	5	1	7AH7	6	37	32	8	1	12	6	1				36	8	1	12	5	1
6SU7	6	38	43	8	7	12	1	1	7AK7	6	37	33	8	1	12	6	1				35	8	1	12	6	1
			43	8	7	12	4	1	7AN7	7	39	33	5	4	7	2	1	7Y4	6	37	45	8	1	12	3	1
6SZ7	6	38	44	8	7	1	2	1										7Z4	6	37	45	8	1	12	6	1
			72	8	7	1	4	1	7AU7	7	8	33	5	4	7	6	1				50	8	1	12	3	1
			72	8	7	1	5	1													50	8	1	12	6	1
6T4	6	41	*33	4	3	2	6	1	7B4	6	37	40	8	1	12	6	1	8A8	8	11	66					1
*Normally shows short position 1-7.									7B5	6	37	52	8	1	12	6	1	8AC9	8	36	28	1	12	3	9	1
6T8	6	17	90					1	7B6	6	37	40	8	1	4	3	1				45	1	12	3	2	1
			63					2				68	8	1	4	5	1				35	1	12	2	3	1
6T8A	6	17	90					1	7B7	6	37	45	8	1	12	6	1	8AC10	8	36	32	1	12	12	7	1
			63					2				68	8	1	4	5	1				32	1	12	12	9	1
6T9	6	36	27	1	12	12	8	1	7B8	6	37	42	8	1	12	4	1				32	1	12	12	11	1
			27	1	12	12	4	1	7C4	6	37	53	8	1	12	4	1	8AL9	8	36	28	1	12	12	5	1
6T10	6	36	28	1	12	12	3	1	7C5	6	37	38	8	1	12	6	1				28	1	12	12	11	1
			25	1	12	12	8	1	7C6	6	37	50	8	1	4	3	1	8AR11	8	36	28	1	12	12	5	1
6U4	6	34	11					1				68	8	1	4	5	1				28	1	12	12	10	1
6U6	6	29	54					1				68	8	1	4	8	1	8AU8	8	12	56					1
6U7	6	38	35	7	2	12	10	1	7C7	6	37	37	8	1	12	6	1				72					2
6U8	6	11	79					1	7D10	6	9	55					1	8AV11	8	36	30	1	12	12	7	1
			55					2	7DJ8	7	39	31	5	4	12	2	1				30	1	12	12	9	1
6U9	6	42	28	5	6	12	3	1				31	5	4	12	7	1				30	1	12	12	11	1
			32	5	6	12	10	1	7E5	6	37	*33	8	2	1	5	1	8AW8	8	12	44					1
6U10	6	36	32	1	12	12	7	1	*Normally shows short position 3-4-6-7.												78					2
			32	1	12	12	9	1	7E6	6	37	40	8	1	4	3	1	8B8	8	39	33	4	5	12	3	1
			32	1	12	12	11	1				69	8	1	4	5	1				39	4	5	12	1	1
6V3	6	15	10					1				69	8	1	4	6	1	8B10	8	36	34	1	12	12	3	1
6V4	6	39	40	5	4	12	1	1	7E7	6	37	47	8	1	12	6	1				34	1	12	12	5	1
			40	5	4	12	7	1				68	8	1	12	3	1				34	1	12	12	8	1
6V6	6	29	79					1				68	8	1	12	4	1	8BA8	8	12	53					1
6V8	6	39	40	5	4	12	6	1	7ES8	7	8	30					2				59					2
			32	5	4	12	2	1				30														
			32	5	4	12	7	1	7EY6	7	29	65					1	8BA11	8	36	29	1	12	12	4	1
6V9	6	42	61	5	4	12	9	1	7F7	6	37	45	8	1	12	4	1				37	1	12	12	9	1
			31	5	6	12	3	1				45	8	1	12	5	1	8BH8	8	12	59					1
6W4	6	34	30	5	6	12	8	1	7F8	6	37	30	7	2	12	1	1				54					2
			11					1				30	7	2	12	6	1	8BM11	8	36	30	1	12	12	6	1
6W6	6	29	51					1	7FC7	7	39	29	4	5	7	2	1				30	1	12	12	11	1
6W7	6	38	50	7	2	12	10	1				29	4	5	7	6	1	8BN8	8	39	35	5	4	12	8	1
6X4	6	41	44	4	3	12	1	1	7G7	6	37	36	8	1	12	6	1				35	5	4	12	1	1
			44	4	3	12	6	1	7GS7	7	14	80					1	8BN11	8	36	29	1	12	12	3	1
6X5	6	33	15					1				53					2				29	1	12	12	7	1
			15					2	7GV7	7	39	30	4	5	8	7	1	8BQ5	8	23	68					1
6X6	6	38	48	7	2	12	3	1				33	4	5	8	9	1	8BQ7	8	8	54					1
			48	7	2	12	5	1	7H7	6	37	35	8	1	12	6	1				54					2
6X8	6	12	73					1	7HG8	7	39	25	4	5	3	2	1	8BQ11	8	36	28	1	12	12	5	1
			61					2				25	4	5	1	6	1				28	1	12	12	10	1
6X9	6	42	30	5	6	12	3	1	7J7	6	37	35	8	1	12	6	1	8BU11	8	36	28	1	12	12	8	1
			30	5	6	12	10	1				50	8	1	12	4	1				28	1	12	12	4	1
6Y6	6	29	40					1	7K7	6	37	45	8	1	12	4	1				28	1	12	12	6	1
6Y9	6	42	27	5	6	12	1	1				65	8	1	12	5	1	8CB11	8	36	28	1	12	12	5	1
			27	5	6	12	6	1				65	8	1	12	6	1				28	1	12	12	10	1
6Y10	6	36	29	1	12	4	3	1	7KY6	7	9	20					1	8CG7	8	8	76					1
			29	1	12	4	8	1	7KZ6	7	9	17					1				76					2
6Z10	6	36	30	1	12	12	11	1	7L7	6	37	36	8	1	12	6	1	8CH8	6	39	33	5	4	12	7	1
			95	1	12	12	6	1	7M-P18	7	41	34	3	4	7	1	1				36	5	4	12	8	1
6Z31	6	41	44	4	3	12	1	1	7N7	6	37	42	8	1	12	4	1	8CL8	8	14	69					1
			44	4	3	12	6	1				42	8	1	12	5	1				51					2
6ZY5	6	33	17					1	7Q7	6	37	35	8	1	12	4	1	8CM7	8	19	80					1
7A4	6	37	41	8	1	12	6	1	7R7	6	37	35	8	1	12	8	1				94					2
7A5	6	37	34	8	1	12	6	1				72	8	1	12	3	1	8CN7	8	18	94					1
7A6	6	37	48	8	1	12	3	1				72	8	1	12	4	1				60					2
			48	8	1	12	6	1	7S7	6	37	38	8	1	12	8	1	8CS7	8	20	96					1
7A7	6	37	45	8	1	12	6	1				52	8	1	12	4	1				95					2
7A8	6	37	40	8	1	12	4	1	7V7	6	37	32	8	1	12	6	1	8CU8	8	39	32	5	4	1	7	1
7A07	6	37	35	8	1	12	6	1	7W7	6	37	31	8	1	4	8	1				33	5	4	8	8	1

\*Normal Shorts refer to position of "D" Switch.

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 10

TUBE TYPE	Heater	Socket	Sens.-itivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sens.-itivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sens.-itivity	A	B	C	D	Test Pos.	
8CX8	8	12	45					1	8R-HP1	8	39	33	4	5	12	3	1	9MN8	9	36	33	1	12	7	8	1	
8CY5	8	1	54					2	8R-LP1	8	39	35	4	5	12	1	1				33	1	12	7	10	1	
8CY7	8	39	31	5	4	2	3	1				32	4	5	12	9	1	9M-P12	9	41	38	3	4	2	1	1	
			45	5	4	2	7	1	8SN7	8	25	78					1	9R-A6	9	40	34	4	5	5	7	1	
808	6	39	41	5	4	2	9	1				78				2	9R-AL1	9	39	33	4	5	2	3	1		
8DE7	8	20	81					1	8U9	8	42	28	5	8	12	5	1	9R-HR2	9	11	68					1	
			90					2				32	5	8	12	10	1				56				2		
8DX8	8	39	26	4	5	12	8	1	8X9	8	42	30	5	8	12	9	1	9U8	9	11	79					1	
			26	4	5	12	1	1				30	5	8	12	10	1				55				2		
8EB8	8	12	35					1	9A8	9	11	66					1	9V9	9	42	31	5	6	12	3	1	
			99					2				55				2				30	5	6	12	8	1		
8EM5	8	16	53					1	9AB4	9	2	83					1	9X8	9	12	73				1		
8ET7	8	39	30	5	4	12	7	1	9AH9	9	36	37	1	12	5	2	1				61				2		
			70	5	4	12	2	1				30	1	12	5	8	1	10AF11	10	36	31	1	12	12	11	1	
			70	5	4	12	3	1	9AK8	9	16	90					1				31	1	12	12	6	1	
8FQ7	8	8	68					1				53				2		10AL11	10	30	31	1	12	12	3	1	
			68					2	9AK10	9	36	32	1	12	12	7	1				35	1	12	12	3	1	
8GJ7	8	22	62					1				32	1	12	12	9	1				31	1	12	12	3	1	
			78					2				32	1	12	12	11	1	10BQ5	10	23	68				1		
8GM6	8	1	64					1	9AM10	9	36	34	1	12	12	7	1	10C8	10	13	59				1		
8GN8	8	12	36					1				34	1	12	12	9	1				73				2		
			98					2				34	1	12	12	11	1	10CW5	10	23	58				1		
8GU7	8	8	56					1	9AQ8	9	8	70					1	10D2	19	41	33	3	4	12	2	1	
			56					2				70				2				33	3	4	12	7	1		
8GX7	8	22	76					1	9AU7	9	8	75					1	10DE7	10	20	81				1		
			73					2				75				2				90				2			
8HA6	8	9	23					1	9BJ11	9	36	28	1	12	12	8	1	10DR7	10	39	32	5	4	2	5	1	
8HG8	8	39	25	4	5	9	2	1				28	1	12	12	11	1				41	5	4	2	7	1	
			25	4	5	1	8	2	9BR7	9	39	32	5	4	9	2	1	10DX8	10	39	26	4	5	12	8	1	
8JEB	8	12	56					1				37	5	4	9	8	1				26	4	5	12	1	1	
			70					2				37	5	4	9	7	1	10/E/312	25	29	47				1		
8JK8	8	8	54					1	9BR8	8	14	72					1	10/E/349	6	29	79				1		
			55					2				55				2		10/E/558	6	38	52	7	2	12	10	1	
8JL8	8	12	40					1	9CG8A	9	14	73					1	10/E/11448	6	29	93				1		
			70					2				57				2		10/E/11533	6	29	63				1		
8JT8	8	12	20					1	9CL8	9	14	69					1	10/E/11581	6	38	40	7	2	12	10	1	
			*99					2				51				2		10EB8	10	12	35				1		
*Tube good if reads 60 or more.									90Z8	9	39	27	4	5	8	5	1				99				2		
8JU8A	8	39	*32	4	5	2	1	1				30	4	5	2	1	1	10EG7	10	38	32	8	7	12	1	1	
			**32	4	5	8	7	1	9EA8	9	11	71					1				45	8	7	12	4	1	
*Normally shows short position 8.												56				2		10EM7	10	38	32	8	7	12	1	1	
**Normally shows short position 2.									9ED4♦	9	44	*52	4	5	12	8	1				45	8	7	12	4	1	
8JV8	8	12	55					1	*Normally shows short position 2-3-6-7-9.			68					1	10EW7	10	20	87				1		
			85					2	9GN8A	9	11	68					1				92				2		
8K11	8	36	38	1	12	12	7	1				56				2		10FD7	10	39	25	4	5	2	3	1	
			38	1	12	12	5	1	9GV8	9	39	25	4	5	12	9	1				32	4	5	2	7	1	
			38	1	12	12	11	1				25	4	5	12	2	1	10FR7	10	39	24	4	5	2	3	1	
8KA8	8	39	26	4	5	12	6	1	9HS6	9	1	66					1				32	4	5	2	7	1	
			33	4	5	12	2	1	9J6	9	2	60					1	10GF7	10	44	27	4	5	12	2	1	
8KR8	8	12	22					1				60				2					38	4	5	12	9	1	
			59					2	9JW8	9	11	80					1	10CH8	10	11	68				1		
8KS8	8	12	33					1				85				2					56				8	1	
			84					2	9KC6	9	39	25	4	5	12	2	1	10GK6	10	9	40				1		
8KT8	8	12	67					1				83	4	5	12	9	1	10GM8	10	39	33	5	4	12	2	1	
			91					2	9KG6♦	9	44	*26	4	5	1	8	1				33	5	4	12	7	1	
8LC8	8	39	24	4	5	9	8	1	*Normally shows short position 2-3-6-7.			22				1		10GN8	10	12	36				1		
			24	4	5	8	2	1	9KV8	9	12	22				1				98				2			
8LE8	8	39	29	4	5	12	9	1				82				2		10GV8	10	39	25	4	5	12	9	1	
8LS6	8	9	44					1	9KX6	9	9	16				1				25	4	5	12	2	1		
8LT8	8	39	27	4	5	7	9	1	9KZ8	9	39	26	4	5	12	2	1	10HA6	10	9	23				1		
			32	4	5	1	8	1				26	4	5	12	9	1	10HF8	10	12	27				1		
			32	4	5	1	8	1	9LA6	9	9	21				1				80				2			
8MD8	8	44	35	4	5	12	8	1	9M-HN3	9	2	56				1		10JA5	10	36	*33	1	12	9	2	1	
			35	4	5	12	8	1				56				2		*Normally shows short position 3-4-10-11.									
			35	4	5	12	9	1	9ML8	9	39	34	4	5	12	6	1	10JA8	10	39	25	4	5	12	7	1	
8M-P12	8	1	60					1				4	5	12	8	1					95	4	5	12	5	1	
8MU8	8	11	42					1				4	5	12	9	1											
			60					2																			

\*Normal Shorts refer to position of "D" Switch.

♦Use TC-80 Adapter

8CX8-10JA8



# B & K DYNA-JET MODEL 707 TUBE CHART

Page 11

TUBE TYPE	Heater	Socket	Sens. tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sens. tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sens. tivity	A	B	C	D	Test Pos.
10J18	10	12	20					1	11R3	10	39	33	5	4	2	9	1	12B4	12	40	35	5	4	3		1
			*99					2	11Y9	12	42	27	5	6	12	1	1	12B7	12	37	45	8	1	12	6	1
			*Tube good if it reads 60 or more.									27	5	6	12	8	1	12BA6	12	1	78					1
10JY8	10	12	36					1	12A4	12	40	32	5	4	3	7	1	12BA7	12	39	33	5	4	12	2	1
			61					2	12A6	12	29	92					1	12BA11	12	36	28	1	12	12	4	1
10KR8	10	12	22					1	12A8	12	38	45	7	2	12	5	1				36	1	12	12	9	1
			59					2	12AB5	12	16	67					1	◆12B-814	12	44	*33	4	5	1	2	1
10KU8	10	39	22	4	5	12	7	1	12AC6	12	41	42	4	3	12	1	1				*Normally shows short position 3-6-7-8.					
			60	4	5	12	2	1	12AC10	12	36	32	1	12	12	7	1	12BC32	12	6	91					1
			60	4	5	12	3	1				32	1	12	12	9	1				78				2	
10LB8	10	12	21					1				32	1	12	12	11	1	12BD6	12	1	85					1
			71					2	12AD6	12	41	35	4	3	12	1	1	12BE3	12	36	26	1	12	4	10	1
10LD6	10	9	51					1	12AD7	12	8	85					1	12BE6	12	1	91					1
10LD12	10	17	90					1				85				2	12BF6	12	5	85					1	
			63					2	12AE6	12	41	52	4	3	12	1	1				80					2
10LE8	10	39	29	4	5	12	9	1				66	4	3	12	5	1	12BF11	12	36	25	1	12	12	3	1
10LW8	10	12	25					1				66	4	3	12	6	1				25	1	12	12	8	1
			92					2	12AE7	12	39	32	5	4	9	2	1	12BH7	12	8	56					1
10LY8	10	12	21					1				32	5	4	9	7	1				56					2
			*99					2	12AE10	12	36	30	1	12	12	8	1	12BK5	12	10	53					1
			*Tube good if it reads 28 or more.									31	1	12	12	3	1									
10LZ8	10	12	54					1	12AF3	12	15	12					1	12BK6	12	6	86					1
			*99					2	12AF6	12	41	37	4	3	12	1	1				70					2
			*Tube good if it reads 40 or more.						12AF11	12	36	31	1	12	12	11	1	12B16	12	41	35	4	3	12	1	1
10T10	10	38	28	1	12	12	3	1				31	1	12	12	6	1	12BN6	12	7	75					1
			25	1	12	12	8	1	12AG6	12	41	35	4	3	12	1	1	12BQ6	12	27	69					1
10Z10	10	36	30	1	12	12	11	1	12AH7	12	38	48	8	7	12	1	1	12BR3	12	15	10					1
			95	1	12	12	6	1				48	8	7	12	5	1	12BR7	12	39	32	5	4	9	2	1
11AF9	10	42	27	5	6	7	1	1	12AJ6	12	41	40	4	3	12	1	1				36	5	4	9	6	1
			27	5	6	2	8	1				66	4	3	12	5	1				36	5	4	9	7	1
11AR11	12	36	28	1	12	12	5	1				66	4	3	12	6	1	12BS3	12	44	27	4	5	2	7	1
			28	1	12	12	10	1	12AJ7	12	39	32	5	4	12	2	1	12BT3	12	36	27	1	12	4	10	1
11BM8	12	39	33	5	4	12	3	1				35	5	4	12	9	1	12BT6	12	6	85					1
			39	5	4	12	1	1	12AL5	12	41	33	3	4	12	2	1				78					2
11BN11	10	36	29	1	12	12	3	1				33	3	4	12	7	1	12BU6	12	6	85					1
			29	1	12	12	7	1	12AL8	12	39	36	5	4	12	3	1				80					2
11BQ11	10	36	28	1	12	12	5	1				52	5	4	12	8	1	12BV7	12	9	39					1
			28	1	12	12	10	1	12AL11	12	36	31	1	12	12	3	1	12BV11	12	36	30	1	12	12	7	1
11BT11	10	36	27	1	12	6	11	1				27	1	12	12	8	1				30	1	12	12	7	1
			30	1	12	8	5	1	12AQ5	12	3	77					1	12BW4	12	39	50	5	4	12	1	1
			26	1	12	8	3	1				12AS5	12	4	55		1				50	5	4	12	7	1
11C5	12	4	54					1	12AT6	12	6	85					1	12BX6	12	3	76					1
11CA11	10	36	35	1	12	8	3	1				78				2	12BX7	12	25	55					1	
			33	1	12	8	8	1	12AT7	12	8	74				1				55					2	
			33	1	12	7	8	1				74				2	12BY7	12	9	42					1	
11CF11	10	36	34	1	12	7	8	1	12AU5	12	28	71				1	12BZ6	12	1	61					1	
			36	1	12	8	11	1				75				1				95					2	
11CH11	10	36	32	1	12	8	5	1	12AU6	12	1	82				1	12BZ7	12	8	95					1	
			31	1	12	6	11	1	12AU7	12	8	75				2				95					1	
			34	1	12	8	5	1	12AU8	12	12	56				1	12C5	12	4	44					1	
11CY7	12	39	30	1	12	8	3	1				72				2	12C8	12	38	55	7	2	12	10	1	
			31	5	4	2	3	1	12AV5	12	28	62				1				65	7	2	12	5	1	
11DS5	10	3	76					1	12AV6	12	6	91				1	12C8Y	12	38	55	7	2	12	10	1	
11FY7	12	36	25	1	12	12	3	1	12AV7	12	8	55				1				65	7	2	12	4	1	
			42	1	12	12	10	1				55				2	12CA5	12	4	55					1	
11HM7	10	39	*29	4	5	6	2	1	12AW6	12	1	78				1	12CK3	12	44	25	4	5	7	2	1	
			*Normally shows short position 3-9.						12AW8	12	12	44				1	12CL3	12	44	27	4	5	2	7	1	
11JE8	10	12	56					1				78				2	12CM6	12	16	64					1	
			78					2	12AX3	12	36	30	1	12	10	4	1	12CNS	12	41	33	4	3	2	5	1
11KV8	10	12	22					1	12AX4	12	34	13				1	12CR6	12	41	39	4	3	12	7	1	
			82					2	12AX7	12	8	*85				1				61	4	3	12	2	1	
11LQ8	12	12	31					1				*85				2	12CS6	12	1	94					1	
			50					2				*Tube good if it reads 22 or more.					12CT3	12	39	32	4	5	6	2	1	
11LT8	12	39	27	4	5	7	9	1	12AY3	12	44	27	5	4	7	2	1	12CT8	12	13	57					1
			32	4	5	1	8	1	12AY3A	12	44	27	5	4	7	2	1				63					2
			32	4	5	1	8	1	12AY7	12	8	93				1	12CU5	12	4	47					1	
11LY8	10	9	46					1																		

\*Normal Shorts refer to position of "0" Switch

◆Use TC-80 Adapter

10JT8-12DA6

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 12

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
12DB5	12	18	30					1	12EN6	12	29	36					1	12J8	12	39	30	5	4	12	1	1
12DEB	12	39	36	5	4	12	1	1	12EQ7	12	39	34	5	4	12	2	1				35	5	4	12	8	1
			34	5	4	12	3	1				71	5	4	12	6	1				35	5	4	12	9	1
12DF5	12	38	52	5	4	9	1	1	12EZ6	12	41	32	4	3	12	1	1	12JB6	12	35	62					
			52	5	4	8	8	1	12F5	12	38	40	7	2	12	10	1	12JB6A	12	35	62					
12DF7	12	6	*65					1	12F8	12	38	40	5	4	12	8	1	12JF5	12	36	*32	1	12	11	3	1
			*85					2				62	5	4	12	1	1				*Normally shows short position 4-10					
*Tube good if it reads 22 or more.									12F31	12	1	78					1	12JM6	12	36	26	1	12	4	5	1
12DJ8	12	39	31	5	4	12	2	1	12FK6	12	41	40	4	3	12	1	1	12JN6	12	36	27	1	12	4	12	1
			31	5	4	12	7	1				65	4	3	12	5	1	12JN8	12	14	67					1
12DK6	12	1	61					1				65	4	3	12	5	1				53					2
12DK7	12	39	33	5	4	8	1	1	12FM6	12	41	35	4	3	12	1	1	12JQ6	12	39	*34	4	5	8	7	1
			80	5	4	8	6	1				65	4	3	12	1	1				*57	4	5	8	8	1
			80	5	4	8	9	1				68	4	3	12	5	1				*May show short position 2-3.					
12DL8	12	39	35	5	4	12	3	1				68	4	3	12	6	1	12JS6	12	36	*29	1	12	9	5	1
			65	5	4	12	9	1	12FQ7	12	8	68					1				*Normally shows short position 3-4-10-11.					
			65	5	4	12	1	1				68					2	12JT6	12	35	65					1
12DM4	12	34	11					1	12F08	12	39	39	5	4	12	2	1	12JT6A	12	35	65					1
12DN6	12	26	47					1				39	5	4	12	7	1	12JZ8	12	36	29	1	12	6	7	1
12DQ4	12	34	11					1	12FR8	12	39	*25	4	5	12	3	1				40	1	12	6	10	1
12DQ6	12	27	65					1				*37	4	5	12	1	1	12JF5	12	36	*32	1	12	11	3	1
12DQ68	12	27	62					1				*62	4	5	12	6	1				*Normally shows short position 4-10.					
12DQ7	12	9	35					1				*Normally shows short position 5.					12K5	12	41	35	4	3	5	8	1	
12DS7	12	39	34	5	4	12	3	1	12FS5	12	1	99					1	12K7	12	38	52	7	2	12	10	1
			*85	5	4	12	1	1	12FT6	12	41	52	4	3	12	1	1	12K8	12	38	35	7	2	12	5	1
								1				66	4	3	12	5	1	12KA8	12	39	26	4	5	12	8	1
*Tube good if it reads 20 or more.												66	4	3	12	6	1				33	4	5	12	2	1
12DT5	12	16	45					1	12FV7	12	8	42					1	12KL8	12	39	31	4	5	12	2	1
12DT6	12	1	91					1				42					2				70	4	5	12	6	1
12DT7	12	8	*85					1	12FX5	12	4	68					1	12L6	12	29	47					1
			*65					2	12FX8	12	39	32	5	4	12	2	1	12MD8	12	44	35	4	5	12	6	1
*Tube good if it reads 22 or more.												28	5	4	12	8	1				35	4	5	12	6	1
12DT8	12	8	71					1	12FY8	12	39	30	4	5	12	3	1				35	4	5	12	8	1
			71					2				39	4	5	12	1	1	12MX8	12	44	27	4	5	12	2	1
12DU7	12	39	31	5	4	12	1	1	12G4	12	41	41	4	3	1	8	1				39	4	5	12	9	1
								1									1	12Q7	12	38	40	7	2	12	10	1
12DV7	12	39	77	5	4	12	7	1	12G11	12	36	33	1	12	12	3	1				63	7	2	12	4	1
			77	5	4	12	9	1				31	1	12	12	6	1				63	7	2	12	5	1
			49	5	4	9	7	1	12GA6	12	41	36	4	3	12	1	1	12R5	12	41	39	4	3	2	8	1
			78	5	4	9	2	1	12G-83A	12	27	65					1	12R-K19	12	15	10					1
			78	5	4	9	3	1	12G-87	12	27	61					1									1
12DV8	12	39	35	5	4	12	3	1	12GC5	12	16	26					1	12R-LL3	12	8	55					2
			58	5	4	12	9	1	12GC6	12	26	52					1				55					1
			58	5	4	12	1	1	12GE5	12	36	*24	1	12	11	3	1	12R-LL5	12	8	68					1
12DW4A	12	44	27	4	5	2	7	1				*Normally shows short position 4-10.					12S8	12	38	45	8	7	5	10	1	
12DW5	12	16	30					1	12GJ5	12	35	65					1				62	8	7	5	1	1
12DW7	12	8	75					1	12G-K17	12	34	12					1				62	8	7	5	4	1
			*90					2	12GN7	12	9	21					1				62	8	7	5	4	1
*Tube good if it reads 22 or more.									12GT5	12	35	63					1				63	8	7	2	3	1
12DW8	12	39	32	5	4	12	2	1	12GTS5A	12	35	63					1	12SA7	12	38	37	7	2	12	5	1
			32	5	4	12	7	1	12GV5	12	36	*26	1	12	3	9	1	12SC7	12	38	48	6	7	12	3	1
								1				*Normally shows short position 3-4-7-10-11.								48	8	7	12	4	1	
12DY8	12	39	44	5	4	12	9	1	12GW6	12	27	62					1	12SF5	12	38	41	8	7	12	3	1
			30	5	4	12	1	1	12H4	12	40	44	4	3	2	8	1	12SF7	12	38	46	8	7	12	2	1
			35	5	4	12	9	1	12H6	12	38	46	7	2	12	3	1				69	8	7	12	5	1
12DZ6	12	41	33	4	3	12	1	1				46	7	2	12	5	1	12SG7	12	30	77					1
12DZ8	12	39	27	4	5	8	3	1				46	7	2	12	5	1									
			30	4	5	2	1	1	12H31	12	1	91					1	12SH7	12	30	77					1
12F5	12	25	93					1	12HB25	12	44	*33	4	3	1	2	1	12SJ7	12	30	83					1
12E13	6	29	52					1				*Normally shows short position 3-6-7-8.								84					1	
12EA6	12	41	32	4	3	12	1	1	12HE7	12	36	27	1	12	10	2	1	12SK7	12	30	*85					1
12EC8	12	39	30	5	4	12	9	1				27	1	12	10	9	1	12SL7	12	25	*85					1
								1									1				*85					2
12ED5	12	4	57					1	12HG7	12	9	28					1	*Tube good if it reads 22 or more.								
12EG6	12	41	36	4	3	12	1	1	12HL5	12	39	30	4	5	1	2	1	12SN7	12	25	78					1
12EH5	12	4	57					1	12HL7	12	39	*33	4	5	6	2	1				76					2
12EK6	12	41	31	4	3	12	1	1				*Normally shows short position 3-9.														



# B & K DYNA-JET MODEL 707 TUBE CHART

Page 13

TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.
12SW7	12	38	52 70 70	8 8 7	7 7 7	12 12 12	2 4 5	1 1 1	14BR11	14	36	30 31 33	1 1 1	12 12 12	12 8 10	2 8 1	1 1 1	15KY8	15	44	27 39 27	4 4 4	5 5 5	12 12 12	2 9 2	1 1 1
12SX7	12	25	78 78	8 7	7 7	12 12	5 1	1 2	14C5	12	37	38	8	1	12	6	1	15KY8A	15	44	39	4	5	12	9	1
12SY7	12	38	39	/	2	12	5	1	14C7	12	37	37	8	1	12	6	1	15LE8	15	39	29	4	5	12	9	1
12110	12	36	28 25	1	12	12	3 6	1 1	14E6	12	37	40 69 69	8 8 8	1 1 1	4 4 4	3 5 6	1 1 1	15MF8	15	36	35 34	1 1	12 12	6 6	7 10	1 1
12U7	12	39	40 40	5 5	4 4	9 9	2 7	1 1	14E7	12	37	47 68	8 8	1 1	12 12	6 3	1 1	15MX8	15	44	27 39	4 4	5 5	12 12	2 9	1 1
12V6	12	29	79					1				68	8	1	12	4	1	16A5	16	23	68					1
12W6	12	29	51					1	14F7	12	37	45 45	8 8	1 1	12 12	4 5	1 1	16A8	16	39	33 39	5 5	4 4	12 12	3 1	1
12X4	12	41	44 44	4 4	3 3	12 12	1 6	1 1	14F8	12	37	30 30	7 7	2 2	12 12	1 6	1 1	16AK9	7	36	33 35 31	6 6 6	12 12 12	6 6 6	10 3 8	1 1 1
13CM5	12	27	57					1	14GT8	14	39	52 35 35	5 5 5	4 4 4	12 12 12	8 2 8	1 1 1	16AQ3*	16	40	30	5	4	7	3	1
13CW4	14	43	*87	10	12	12	2	1	14GW8	14	39	25 35	4 4	5 5	2 7	8 1	1	16A03	16	40	30	5	4	3	7	1
*For grid emission turn O switch to position 4.												35	5	4	12	8	1	16BQ11	16	36	28	1	12	12	5	1
13D1	25	25	78					2	14H7	12	37	35	8	1	12	6	1				28	1	12	12	10	1
13DE7	12	20	81					1	14J7	12	37	50	8	1	12	4	1	16BX11	16	36	32	1	12	12	2	1
			90					2	14JG8	14	39	32 27	4 4	5 5	12 12	8 2	1 1	16C-828	16	36	*28	1	12	5	8	1
13DF7	12	8	*85 *85					2				27	4	5	12	2	1	*Normally shows short position 3-4-10-11.								
*Tube good if it reads 22 or more.									14N7	12	37	27 42 42	4 8 8	5 1 1	12 12 12	6 4 5	1 1 1	16CL8	16	14	69 51					1
13OR7	12	39	32	5	4	2	5	1	14Q7	12	37	35	8	1	12	6	1	16GK6	16	9	40					2
			41	5	4	2	7	1	14R7	12	37	35	8	1	12	6	1	16GY5	16	36	*25	1	12	5	9	1
13EM7	12	38	32 45	8 8	7 7	12 12	1 4	1 1				72 72	8 8	1 1	12 12	3 4	1 1	*Normally shows short position 1-3-4-7-10.								
13FD7	12	39	25 32	4 4	5 5	2 2	3 7	1 1	14S7	12	37	38	8	1	12	6	1	16NB5	16	36	*25	1	12	11	3	1
			32	4	5	2	7	1	14V7	12	37	32	8	1	12	6	1	16K11	16	36	38	1	12	12	7	1
13FG7	12	14	68 56					1 2	14W7	12	37	31	8	1	4	6	1				38	1	12	12	11	1
13FM7	14	36	25 36	1 1	12 12	3 3	8 10	1 1	14X7	12	37	43 36	8 8	1 1	12 12	3 5	1 1	16KA6	16	36	*30	1	12	9	5	1
13FR7	12	39	24	4	5	2	9	1	14Y4	12	37	35	8	1	12	3	1	*May show short position 3-4-7-11.								
			32	4	5	2	7	1				36	8	1	12	5	1	16LD6	16	9	51					1
13GB5	12	44	*25	4	5	2	1	1	15A6	15	39	30	5	4	12	2	1	16LUS	16	36	27	1	12	6	7	1
*Normally shows short position 3-6-7-8.									15A8	15	38	36	7	2	12	4	1				27	1	12	6	10	1
13GF7	12	44	27 38	4 4	5 5	12 12	2 9	1 1	15AB9	15	42	40 79	7 5	2 6	12 10	3 2	1 1	16MY8	16	36	27	1	12	6	7	1
13GF7A	12	44	27 38	4 4	5 5	12 12	2 9	1 1	15AF11	15	36	31 31 35	1 1 1	12 12 12	11 8 3	1 1 1	16Y9	16	42	27	5	6	12	1	1	
13J10	12	36	96	1	12	12	6	1				40	7	2	12	3	1	17A8	17	11	66					1
13JT8	12	12	20					1	15B011	15	36	79 31 31	5 1 1	6 12 12	4 11 8	8 1 1	1				55 79 79					2
			*99					2				31	1	12	12	3	1	17AB9	17	42	79	5	6	10	2	1
*Tube good if it reads 60 or more.									15B011	15	36	26	1	12	12	11	1	17AB10	17	36	29	1	12	12	11	1
13JZ8	12	36	29 40	1 1	12 12	6 6	7 10	1 1				26	1	12	12	11	1				95	1	12	12	6	1
13SJ7	12	30	83					1	15B011A	15	36	31 31 26	2 1 1	12 12 12	12 6 11	3 1 1	1	17AF3	17	15	12					1
13V10	12	36	33 33	1 1	12 12	12 12	5 8	1 1				31	1	12	12	3	1	17AV5	17	28	62					1
13Z10	12	36	30	1	12	12	11	1				31	1	12	12	3	1	17AX3	17	36	30	1	12	10	4	1
			95	1	12	12	6	1				31	1	12	12	6	1	17AX4	17	34	13					1
1444	12	37	41	6	1	12	6	1				31	1	12	12	6	1	17AY3	17	44	27	5	4	7	2	1
1445	12	37	34	6	1	12	6	1	15CW5	15	23	58					1	17AY3B	17	44	27	5	4	7	2	1
14A7	12	37	45	8	1	12	6	1	15DQ8	15	39	26	4	5	12	8	1	◆17B-814	17	44	*33	4	5	1	2	1
14AF7	12	37	41	8	1	12	4	1				26	4	5	12	1	1	*Normally shows short position 3-6-7-8.								
			41	8	1	12	5	1	15LA7	15	38	35 39	8 8	7 7	12 12	1 4	1 1	17BD11	17	36	26 31	1 1	12 12	12 3	11 1	1
14B6	12	37	40	8	1	4	3	1	15EW6	15	1	77					1				31	1	12	12	6	1
			68	6	1	4	5	1	15EW7	15	20	87					2	17BE3	17	36	26	1	12	4	10	1
			68	6	1	4	6	1				92						17BF11	17	36	25	1	12	12	3	1
14B8	12	37	42	6	1	12	4	1	15FM7	15	36	25	1	12	3	6	1				25	1	12	12	6	1
14BF11	14	36	25 25	1 1	12 12	12 12	3 8	1 1				36	1	12	3	10	1	17BF11A	17	36	25	1	12	12	3	1
			25	1	12	12	8	1	15FY7	15	36	25	1	12	12	3	1	17BH3	17	44	27	5	4	7	2	1
14BL11	14	36	29 31	1 1	12 12	12 12	3 5	1 1	15HA6	15	9	23					1	17BH3A	17	44	27	5	4	7	2	1
			29	1	12	12	11	1	15HB6	15	9	20					1	17BJ6	17	1	61					1
148011	14	36	28 28	1 1	12 12	12 12	5 10	1 1									1	17BQ6	17	27	69					1

\*Normal Shorts refer to position of "D" Switch. ◆Use TC-80 Adapter.

12SW7-17BQ6

</

# B & K DYNA-JET MODEL 707 TUBE CHART

Page 14

TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.
17BR3	17	15	10					1	17R5	17	4	50					1	19GY5	19	36	*25	1	12	5	9	1
17BS3	17	44	27	4	5	2	7	1	17R-HH2	17	8	65					1	19HR8	19	1	71					1
17BW3	17	36	28	1	12	4	10	1				65					2	19HS6	19	1	66					1
17B23	17	36	30	1	12	4	10	1	17R-K19	17	15	10					1	19HV8	19	14	64					1
17C5	17	4	44					1	17W6	17	29	52					1									
17C8	17	39	33	5	4	12	2	1	17X10	17	36	98	1	12	12	6	1									
			65	5	4	12	7	1				28	1	12	12	11	1									
			65	5	4	12	8	1	17Y9	17	42	27	5	6	12	1	1									
17C9	17	39	28	5	4	6	1	1				27	5	6	12	8	1									
			28	5	4	10	7	1	17Z3*	17	39	33	4	5	2	9	1									
17CA5	17	4	55					1	*If No Test use alternate settings below.																	
17CK3	17	44	25	4	5	7	2	1				17	40	33	4	5	2	3	1							
17CL3	17	44	27	4	5	2	7	1	18A5	18	28	69					1									
17CQ4	17	34	11					1	18AJ10	18	36	32	1	12	4	3	1									
17CT3	17	39	32	4	5	6	2	1				33	1	12	4	8	1									
17CU5	17	4	47					1	18AK5	18	1	63					1									
17D4	17	34	11					1	18AQ5	18	3	77					1									
17DE4	17	34	13					1	18CS1	18	39	29	9	1	12	3	1									
17DM4	17	34	11					1				29	9	1	12	7	1									
17DQ4	17	34	11					1	18DZ8	18	39	27	4	5	8	3	1									
17DQ6	17	27	65					1				30	4	5	2	1	1									
17DQ68	17	27	62					1	18FW6	18	1	79					1									
17DW44	17	44	27	4	5	2	7	1	18FX6	18	1	92					1									
17EW8	17	8	65					1	18FY6	18	6	84					1									
			65					2				81					2									
17FY7	17	36	25	1	12	12	3	1	18GB5	18	44	*25	4	5	2	1	1									
			42	1	12	12	10	1	*Normally shows short position 3-6-7-8.																	
17GE5	17	36	*24	1	12	11	3	1	18G06	18	1	80					1									
								1	18GE6	18	6	78					1									
17GJ5	17	35	65					1				85					2									
17GJ5A	17	35	65					1	18GV5	18	36	*26	1	12	5	9	1									
17GT5	17	35	63					1	*Normally shows short position 3-4-7-10-11.																	
17GT5A	17	35	63					1	18GV8	18	39	25	4	5	12	9	1									
17GV5	17	36	*26	1	12	9	5	1				25	4	5	12	2	1									
								1	18HB8	18	39	36	5	4	12	9	1									
*Normally shows short position 3-4-7-10-11.												33	5	4	12	1	1									
17GW6	17	27	62					1	18J6	18	6	60					1									
17GY5	17	36	*25	1	12	5	9	1				60					2									
								1	18R-AL1	18	39	33	4	5	2	3	1									
17H3	17	15	13					1	19A3	19	41	32	3	4	6	5	1									
17H-B25	17	44	*33	4	5	1	2	1	19AJ8	6	39	85	5	4	12	1	1									
								1				38	5	4	12	9	1									
17HC8	17	39	36	5	4	12	3	1	19AQ5	19	3	77					1									
			38	5	4	12	1	1	19AU4	19	34	10					1									
17HG8	17	39	25	4	5	3	2	1	19AG6	19	26	66					1									
			25	4	5	1	6	1									1									
17J86	17	35	62					1	19BX6	19	9	76					1									
17J86A	17	35	62					1	19BY7	19	9	62					1									
17JF6	17	44	*26	4	5	2	6	1	19C8	19	17	94					1									
								1				62					2									
17JG6	17	35	56					1	19CG3	19	36	30	1	12	4	10	1									
17JG6A	17	35	56					1	19CL8-A	19	14	74					1									
17JK8	17	8	54					1				53					2									
			55					2	19D8	19	39	32	5	4	12	2	1									
17JM6	17	36	26	1	12	4	5	1				35	5	4	12	9	1									
17JN6	17	36	27	1	12	4	11	1	19QE7	19	20	81					1									
17JQ6	17	39	*34	4	5	8	7	1				90					2									
			*57	4	5	8	8	1	19DK3	19	44	31	4	5	2	7	1									
								1	19DN6	19	26	47					1									
17JR6	17	35	50					1	19DQ3	19	36	30	1	12	4	10	1									
17JS6	17	36	*29	1	12	9	5	1	19EAB	19	11	71					1									
								1				56					2									
*Normally shows short position 3-4-10-11.									19EW7	19	20	87					1									
17JT6	17	35	65					1				92					2									
17JT6A	17	35	65					1	19EZ8	19	39	33	5	4	12	2	1									
17J28	17	36	29	1	12	8	7	1				33	5	4	12	7	1									
			40	1	12	8	10	1				33	5	4	12	9	1									
17KV6	17	44	30	4	5	1	2	1									1									
17KW6	17	44	30	4	5	1	8	1	19FX5	19	4	68					1									
17L6	17	29	47					1	19GQ7	19	39	24	4	5	3	2	1									
17LD8	17	44	25	4	5	12	2	1				24	4	5	3	6	1									
			33	4	5	12	9	1				24	4	5	3	8	1									

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter.

17BR3-21LU8



TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.		
21MY8	22	36	27	1	12	6	7	1	25HX5	25	44	*30	4	5	7	1	1	30KD6	30	36	*26	1	12	9	5	1		
22AL3*	22	40	30	5	4	7	3	1	*Normally shows short position 2-3.	25JQ6	25	39	*34	4	5	8	7	1	*Normally shows short position 3-4-10-11.	30KG6	30	44	*26	4	5	1	8	1
*If no test, use alternate settings.									*57	25JZ8	25	36	29	1	12	6	7	1	*Normally shows short position 2-3-6-7.	30L1	7	39	33	5	4	7	2	1
22AL3	22	40	30	5	4	3	7	1	40				1	12	6	10	1									1		
22BH3	22	44	27	5	4	7	2	1	25L6	25	29	47					1	30M86	30	36	*32	1	12	9	5	1		
22BH3A	22	44	27	5	4	7	2	1	25M-P20	25	1	43					1	*Normally shows short position 3-4-10-11.	30M-P23	30	41	30	3	4	5	2	1	
22BW3	22	36	28	1	12	4	10	1	25R-K19	25	15	10					1	30M-P27	30	41	30	3	4	5	2	1		
22DE4	22	34	13					1	25SN7	25	25	78					1									1		
22JF6	22	44	*26	4	5	2	6	1									2	30PL12	16	39	33	5	4	12	3	1		
*Normally shows short position 1-7.									25U4	25	34	11					1	39	5	4	12	1	1	1		1		
22JG6	22	35	56					1	25W4	25	34	11					1	30P16	16	23	68					1		
22JG6A	22	35	56					1	25W6	25	29	51					1	31AL10	30	*36	51	1	12	6	3	1		
22JR6	22	35	50					1	25Z6	25	38	34	7	2	12	3	1	33	1	12	6	8	1	1		1		
22JU6	2	35	55					1									1									1		
22KM6	22	35	53					1									1									1		
22KV6	22	44	30	4	5	1	2	1	26A6	25	1	77					1	31JS6A	30	36	*29	1	12	9	5	1		
23JG6	22	36	*29	1	12	9	5	1	26A7	25	38	29	7	6	12	1	1	*Normally shows short position 3-4-10-11.	31LQ6	30	35	*52					1	
*Normally shows short position 3-4-10-11.																	1	31LR8	30	44	31	4	5	12	2	1		
23JS6A	22	36	*29	1	12	9	5	1	26A08	25	8	70					1	31	4	5	12	9	1	1		1		
*Normally shows short position 3-4-10-11.																	2	31LZ6	30	35	53					1		
23MB6	22	36	*32	1	12	9	5	1	26BK6	25	6	86					1	32A8	30	39	33	5	4	12	3	1		
*Normally shows short position 3-4-10-11.																	2	39	5	4	12	1	1	1		1		
23Z9	22	36	30	1	12	6	10	1	26C6	25	6	85					1	32ET5	30	4	60					1		
			39	1	12	6	3	1									2	32HQ7	35	36	34	1	12	7	2	1		
									26D6	25	1	93					1	34	1	12	7	9	1		1			
24AX4	25	34	13					1	26DQ5	25	26	55					1	33GT7	30	36	*55	1	12	7	10	1		
24BF11	25	36	25	1	12	12	3	1	26E6	25	29	40					1	*26	1	12	7	2	1		1			
			25	1	12	12	8	1	26HU5	25	38	*28	7	8	1	5	1									1		
24JE6A	25	35	59					1	*Normally shows short position 2-6.								1									1		
24JZ8	25	36	29	1	12	6	7	1	26JG6	25	35	56					1	33GY7	30	36	*56	1	12	7	11	1		
			40	1	12	6	10	1	26LW6	25	38	*31	7	8	1	5	1	*26	1	12	7	2	1		1			
24LQ6	25	35	52					1	*Normally shows short position 2-6								1									1		
24LZ6	24	35	53					1	26Z5	25	39	36	5	4	9	1	1	33GY7A	30	36	*56	1	12	7	11	1		
25A6	25	29	74					1									1	*26	1	12	7	2	1		1			
25A04	25	34	10					1	27G85	25	44	*25	4	5	2	1	1									1		
25AV5	25	28	62					1	*Normally shows short position 3-6-7-8.								1	33HE7	30	36	27	1	12	10	2	1		
25AX4	25	34	13					1	27KG6	25	44	*26	4	5	1	8	1	27	1	12	10	9	1		1			
25B6	25	29	48					1	*Normally shows short position 2-3-6-7.								1	33JR6	30	35	55					1		
25B-814	25	44	*33	4	5	1	2	1	27LF6	25	36	*31	1	12	5	9	1	33JV6	30	36	28	1	12	4	11	1		
*Normally shows short position 3-6-7-8									*May show short position 3-4-7-10-11								1	34CD3	35	36	*27	1	12	4	10	1		
25BK5	25	10	53					1	28D7	30	37	40	8	1	12	2	1	*Some tubes may show short position 5-6-8-9.	34CE3	35	36	25	1	12	4	10	1	
25BQ6	25	27	69					1									1	34CM3	35	44	30	4	5	2	7	1		
25BR3	25	15	10					1	28EC4	30	38	32	7	8	2	5	1	34DK3	35	44	31	4	5	2	7	1		
25C5	25	4	44					1	28GB5	30	44	*25	4	5	2	1	1	34GD5	35	4	57					1		
25C6	25	29	45					1	*Normally shows short position 3-6-7-8.								1	34R3	35	39	33	5	4	2	9	1		
25CA5	25	4	55					1	28HA6	30	9	23					1	35A5	35	37	34	8	1	12	6	1		
25CQ6	25	26	53					1	28HO5	30	36	*27	1	12	3	11	2	35B5	35	3	55					1		
25CG3	25	36	30	1	12	4	10	1	*Normally shows short position 4-5-9-10.								1	35C5	35	4	54					1		
25CK3	25	44	30	4	5	7	2	1	29GK6	30	9	40					1									1		
25CM3	25	44	30	4	5	2	7	1	29KQ6	30	44	*29	4	5	1	8	1	35CD6	35	26	53					1		
25CT3	25	39	32	4	5	6	2	1	*Normally shows short position 2-3-6-7.								1	35DZ8	35	39	27	4	5	8	3	1		
25CQ6	25	27	69					1	29LE6	30	44	*30	4	5	8	1	1	30	4	5	2	1	1		1			
25D4	25	34	11					1	*Normally shows short position 2-3-6-7.								1	35EN5	35	4	57					1		
25DK3	25	44	31	4	5	2	7	1	30A5	30	41	27	3	4	5	2	1	35GL6	35	41	39	4	3	6	2	1		
25DK4	25	41	26	3	4	6	5	1	30AE3*	30	40	30	5	4	7	3	1	35HB8	35	39	36	5	4	12	9	1		
25DL3	25	44	29	4	5	7	2	1	*If no test, use alternate settings.								1	33	5	4	12	1	1		1			
25DN6	25	26	47					1	30AE3	30	40	30	5	4	3	7	1	35L6	35	29	54					1		
25DQ6	25	27	65					1	30AG11	30	36	28	1	12	12	8	1	35LR6	35	36	*32	1	12	9	5	1		
25DT5	25	16	A5					1									1	*May show short position 3-4-7-10-11.								1		
25E5	25	27	58					1									1									1		
25EC6	25	26	53					1									1	35W4	35	41	33	4	3	6	5	1		
25EH5	25	4	57					1	30C1	9	11	66					1	35Y4	35	37	31	8	1	4	2	1		
25F5	25	4	54					1	30CW5	30	23	58					1	35Z3	35	37	31	8	1	12	2	1		
25F5A	25	4	54					1	30HD5	30	36	*27	1	12	3	11	1	35Z4	35	38	33	7	2	12	5	1		
25FY8	25	39	30	4	5	12	3	1	*Normally shows short position 4-5-9-10.								1	35Z5	35	38	33	7						

■ Use TC-62B Adapter.

● Use TC-80 Adapter.

\* Normal Shorts refer to position of "D" Switch.

21MY8-36MC6

## B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
38A3	35	40	30	4	5	1	6	1	407A	40	39	29	1	9	5	3	1	5823	1	41	*85	5	6	5	4	1
38HE7	40	36	27	1	12	10	2	1																		
			27	1	12	10	9	1	408A	19	1	65	1	9	5	7	1									
38HK7	40	36	29	1	12	10	9	1	502A	6	38	26	2	7	12	5	1	5824	25	29	48					
			29	1	12	10	2	1	884	6	38	35	2	7	12	5	1	5845	4	41	*100	3	4	7	1	1
40FR5	40	4	54					1	1003	6	31	8					1									
40MD6	40	36	*26	1	12	9	5	1				8					2									
									1201	6	37	*33	8	2	1	5	1									
*Normally shows short position 3-4-10-11.																										
40KG6	40	44	*26	4	5	1	8	1	*Normally shows short position 3-4-6-7.	1203	6	37	53	8	1	12	4	1								
*Normally shows short position 2-3-6-8.									1222A	6	38	25	1	6	12	4	1									
40Z5	50	38	*31	7	2	3	5	1	1223	6	38	50	7	2	12	10	1									
42EC4	40	38	32	7	8	2	5	1	1232	6	37	36	8	1	12	8	1									
42KN6	22	36	*30	7	12	9	5	1	1273	6	37	37	8	1	12	6	1									
*DO NOT turn D switch to position 1 and 12.									1274	6	37	45	8	1	12	3	1									
*Normally shows short position 3-4-10-11.																										
45B5	50	23	68					1	1280	12	37	45	8	1	12	6	1									
45Z3	50	41	32	7	1	6	2	1	1294	2	37	60	8	1	12	4	1									
45Z5	50	38	31	7	2	3	5	1	1611	6	29	91					1									
50A5	50	37	35	8	1	12	6	1	1612	6	38	44	7	2	1	10	1									
50B5	50	3	38					1	1614	6	29	67					1									
50BK5	50	10	53					1	1619	3	38	39	7	2	12	5	1									
50BM8	50	39	33	5	4	12	9	1	1620	6	38	50	7	2	12	10	1									
			39	5	4	12	1	1	1621	6	29	91					1									
50C5	50	4	44					1	1622	6	29	63					1									
50C6	50	29	45					1	1626	12	29	82					1									
50CA5	50	4	55					1	1631	6	29	63					1									
50CD6	50	26	53					1	1632	12	29	47					1									
50DC4	50	41	33	4	3	6	5	1	1634	12	38	48	8	7	12	3	1									
50E5	50	27	58					1				48	8	7	12	4	1									
50EH5	50	4	57					1	1665	6	41	32	4	3	5	1	1									
50FA5	50	4	54					1	1667	6	41	32	4	3	5	1	1									
50FE5	50	29	37					1	1852	6	30	60					1									
50FK5	50	4	88					1	1853	6	30	74					1									
50FY8	50	39	30	4	5	12	3	1	2050	6	38	34	7	2	12	5	1									
			39	4	5	12	1	1	5591	6	1	63					1									
50CY7	50	36	*55	1	12	7	11	1	5649	12	29	92					1									
			*30	1	12	7	2	1	5654	6	1	63					1									
*Normally shows short position 9-10.									5659	12	29	92					1									
50HC6	50	41	26	3	4	6	2	1	5661	12	30	84					1									
50HK6	50	41	27	3	4	6	2	1	5663	6	41	25	3	4	12	1	1									
50HN5	50	39	30	4	5	1	2	1	5670	6	39	29	9	1	12	3	1									
50JY6	50	27	55					1				29	9	1	12	7	1									
50L6	50	29	47					1	5679	6	37	48	8	1	12	9	1									
50X6	50	37	35	8	1	12	3	1				48	8	1	12	8	1									
			35	8	1	12	6	1	5686	6	23	87					1									
50Y6	50	38	35	7	2	12	3	1	5687	12	39	37	5	4	8	2	1									
			35	7	2	12	5	1				37	5	4	8	7	1									
50Y7	50	38	35	7	2	6	3	1	5691	6	25	*85					1									
			35	7	2	6	5	1				*85					2									
53HK7	50	36	29	1	12	10	9	1																		
			29	1	12	10	2	1	*Tube good if it reads 22 or more.	5692	6	25	78				1									
53KU	5	33	10					1				78					2									
			10					2	5693	6	30	83					1									
55N3	50	39	29	4	5	6	9	1	5696	6	41	34	4	3	5	8	1									
58HE7	50	36	27	1	12	10	2	1	5725	6	1	77					1									
			27	1	12	10	8	1	5726	6	41	33	3	4	12	2	1									
60EH5	50	4	57					1				33	3	4	12	7	1									
60FX5	50	4	68					1	5727	6	41	32	4	3	5	1	1									
60HL5	50	39	30	4	5	1	2	1	5749	6	1	78					1									
64SPT	6	39	33	5	4	1	2	1	5750	6	1	91					1									
150C3	50	38	*99	2	11	3	5	1	5751	12	8	*85					1									
												*85					2									
*Tube good if it reads 60 or more.									*Tube good if it reads 22 or more.	5755	16	39	38	4	5	9	3	1								
*Normally shows short position 11.												38	4	5	9	6	1									
*Normally shows grid emission.									5763	6	39	33	5	4	8	9	1									
*Normally shows short position 1-6-9.									5814-A	12	8	75					1									
213PEN	19	39	*32	5	4	7	2	1				75					2									
396-A	6	39	29	9	1	12	3	1																		
			29	9	1	12	1	1																		
4038	6	1	63					1																		

◆Use TC-80 Adapter

\*Normal Shorts refer to position of "D" Switch.

- Use TC-628 Adapter.

**38A3-6146**



# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6147	6	29	63					1	6829	12	8	54					1	7586	6	43	*85	10	12	12	2	1
6159	25	38	*38	7	2	1	5	1				54					2									
	*Normally shows short position 4-6.								6883	12	38	*38	7	2	1	5	1	7587	6	43	*67	10	12	12	2	1
6180	6	25	78					1									2									
			78					2									1									
6186	6	1	80					1	6887	6	41	33	4	3	12	2	1	7591	6	38	34	7	2	4	6	1
6187	6	1	87					1				33	4	3	12	7	1	7607	6	38	*32	7	2	1	5	1
6188	6	25	*81					1	6888	6	30	62					1									
			*81					2	6919	6	41	33	3	4	12	2	1									
	*Tube good if it reads 12 or more.											33	3	4	12	7	1	7643	6	11	72					1
6189	12	8	75					1	6922	6	8	24					1	7687	6	11	77					2
			75					2				24					2									
6197	6	39	*32	5	4	2	9	1	6939	12	39	34	4	5	9	1	1	7693	6	1	93					1
								1				34	4	5	9	3	1	7694	6	1	84					1
6198	12	8	75					1	6968	6	1	63					1	7695	50	39	34	5	4	12	8	1
								2	6973	6	16	62					1	7701	12	39	*38	5	4	1	2	1
6201	12	8	74					2	7000	6	38	50	7	2	12	10	1									
			74					2	7025	12	8	*85					2									
6202	6	41	44	4	3	12	1	1				*85														
			44	4	3	12	6	1																		
6203	6	39	41	4	5	12	1	1	7027	6	38	*36	7	2	5	6	1									
			41	4	5	12	9	1																		
6211	12	8	54					1				92					1									
			54					2	7036	6	1	92					1									
6216	6	39	*29	4	5	3	2	1	7044	12	39	30	4	5	8	2	1									
								1				30	4	5	8	7	1									
	*Normally shows short position 1-6.								7054	12	9	42					1									
6218	6	39	72	4	5	12	2	1				33	3	4	12	2	1									
6227	6	9	53					1	7055	12	41	33	3	4	12	7	1									
6265	6	1	89					1				33	3	4	12	7	1									
6267	6	39	40	5	4	2	9	1	7056	12	1	64					1									
								1	7057	12	8	53					2									
6293	6	38	*38	7	2	1	5	1				53					2									
								1	7058	12	8	*85					1									
6336	6	38	29	8	7	12	1	1				*85					2									
			29	8	7	12	4	1																		
6350	12	39	31	4	5	9	3	1				79					1									
								1	7059	12	11	55					2									
6360	12	39	30	4	5	9	1	1				55					1									
			30	4	5	9	3	1				75					2									
6384	6	38	33	8	6	12	7	1	7061	12	16	67					1									
6417	12	39	33	5	4	8	9	1	7062	12	8	54					1									
								1				54					2									
6463	12	39	28	4	5	9	3	1	7105	12	38	35	8	7	12	1	1									
			28	4	5	9	8	1				35	8	7	12	4	1									
6485	6	1	58					1	7119	12	39	30	4	5	8	2	1									
6516	6	41	34	4	3	12	1	1				30	4	5	8	7	1									
6520	6	38	35	8	7	12	1	1	7167	12	1	54					1									
								1																		
6550	6	29	52					1	7189	6	39	*33	5	4	1	2	1									
6660	6	1	78					1																		
6661	6	1	89					1																		
6662	6	1	81					1																		
6663	6	41	33	3	4	12	2	1																		
			33	3	4	12	7	1																		
6664	6	2	83					1																		
6669	6	3	77					1																		
6676	6	1	64					1																		
6677	6	39	*32	5	4	2	9	1																		
								1																		
6678	6	11	79					1																		
			55					2																		
6679	12	8	79					1																		
			79					2																		
6680	12	8	75					2																		
			75					2																		
6681	12	8	*85					1																		
			*85					2																		
	*Tube good if it reads 22 or more.																									
6686	6	9	60					1																		
6687	6	1	89					1																		
6688	6	23	82					1																		
6689	6	39	25	4	5	12	2	1																		
								1																		

\*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
8327	6	23	65					1	CV452	6	6	85					1	CV686	50	38	*85	2	11	3	5	1
8417	6	29	54					1									2	*Normally shows short position 11.								
8425	6	1	87					1	CV453	6	1	91					1	*Normally shows grid emission.								
8458	12	44	32	4	5	9	1	1	CV454	6	1	78					1	CV692	6	31	8					1
			32	4	5	9	3	1	CV455	12	8	74					1				8				2	
8552	12	38	*38	7	2	1	5	1									2	CV694	12	30	77					1
*Normally shows short position 4-6.									CV491	12	8	75					1	CV697	12	30	83					1
8556	6	39	*73	5	4	7	8	1									2	CV698	12	30	83					1
*Normally shows shorts position 1, 3, 6, 9									CV492	12	8	*85					1	CV700	12	38	46	8	7	12	2	1
8908	6	38	*30	7	8	1	5	1				*85					2				68	8	7	12	4	1
*Normally shows short position 2-6.									*Tube good if it reads 22 or more.									CV703	6	38	68	8	7	12	5	1
8950	12	36	*27	1	12	9	5	1	CV493	6	41	44	4	3	12	1	1	CV706	6	38	35	7	2	12	5	1
*Normally shows shorts position 2, 3, 4, 6, 10, 11												44	4	3	12	6	1	CV717	5	33	22					1
9001	6	1	93					1	CV511	6	29	79					1				22					1
9002	6	41	*46	4	3	1	6	1	CV538	12	38	37	7	2	12	5	1	CV723	3	38	39	7	2	12	5	1
*Normally shows short position 2-7.									CV544	12	30	84					1	CV726	35	37	31	8	1	12	2	1
9003	6	1	*73					1	CV547	12	38	42	8	7	12	2	1	CV728	2	38	53	7	2	12	10	1
*Tube good if it reads 23 or more.												71	8	7	12	4	1	CV729	5	33	12					1
9006	6	41	*55	4	3	1	5	1				71	8	7	12	5	1				12				2	
*Normally shows short position 2-7.									CV551	25	29	45					1	CV731	6	29	91					1
A863	6	38	50	7	2	12	10	1	CV552	25	29	47					1	CV732	6	34	11					1
A1834	6	38	35	8	7	12	1	1	CV553	25	29	47					1	CV747	6	30	60					1
			35	8	7	12	4	1	CV554	6	38	48	7	2	12	3	1	CV753	2	41	*70	7	1	2	6	1
AR18	6	38	40	7	2	12	10	1				48	7	2	12	5	1	*Normally shows short position 5-11.								
			63	7	2	12	4	1	CV559	25	38	34	7	2	12	3	1	CV755	1	38	55	7	2	12	5	1
												34	7	2	12	5	1	CV756	1	38	55	7	2	12	5	1
ARDD3	6	38	48	7	2	12	3	1	CV561	35	29	54					1	CV760	1	38	55	7	2	12	5	1
			48	7	2	12	5	1	CV562	35	29	54					1	CV764	2	38	54	7	2	12	10	1
ARH1	6	38	44	7	2	12	10	1	CV565	35	37	31	8	1	12	2	1	CV768	2	38	48	7	2	12	5	1
ARP15	6	38	52	7	2	12	10	1	CV567	35	38	33	7	2	3	5	1	CV770	2	38	54	7	2	12	10	1
ARP16	6	38	50	7	2	12	10	1	CV568	35	38	33	7	2	3	5	1				64	7	2	12	4	1
ARP17	6	29	91					1	CV571	50	29	47					1	CV772	1	38	55	7	2	12	4	1
ARP32	6	29	79					1	CV572	6	33	15					2				67	7	2	12	5	1
ARP33	6	29	79					1				15					1	CV773	1	38	55	7	2	12	4	1
ARTH-1	6	38	35	7	2	12	5	1	CV573	6	33	15					1	CV775	1	37	55	8	1	12	6	1
												15					2	CV776	1	37	55	8	1	12	6	1
AU13	5	33	32					1	CV574	6	33	15					1	CV777	1	37	54	8	1	5	8	1
			32					2				15					2	CV778	1	37	68	8	1	12	4	1
AZ32	4	33	32					1	CV575	5	33	16					1	CV779	2	37	53	8	1	12	6	1
			32					2				16					1				63	8	1	12	4	1
836	12	25	78					1				16					2	CV780	2	37	52	8	1	12	6	1
									CV578	6	38	45	7	2	12	5	1				60	8	1	12	4	1
865	6	25	78					2	CV579	6	38	45	7	2	12	5	1	CV781	1	37	53	8	1	5	6	1
			78					2	CV580	6	38	45	7	2	12	5	1	CV782	1	41	57	7	1	5	4	1
8152	12	8	74					1	CV581	6	29	99					1	CV783	1	41	*55	7	1	5	3	1
			74					2	CV582	6	29	99					1	*Normally shows short position 2-6.								
8309	12	8	74					1	CV583	6	29	99					1	CV784	1	41	56	7	1	12	8	1
			74					2	CV586	6	29	63					1				95	7	1	12	5	1
8319	7	39	33	5	4	7	2	1	CV587	6	38	40	7	2	12	10	1	CV785	1	41	55	7	1	5	6	1
			33	5	4	7	6	1				63	7	2	12	4	1	CV786	1	38	54	7	2	12	5	1
8329	12	9	75					1				63	7	2	12	5	1	CV797	6	41	32	4	3	5	1	1
									CV588	6	38	40	7	2	12	10	1	CV805	50	38	35	7	2	12	3	1
6339	12	8	*85					2				63	7	2	12	4	1				35	7	2	12	5	1
			*85					2	CV589	6	38	40	7	2	12	10	1	CV807	3	41	*36	7	1	5	4	1
*Tube good if it reads 22 or more.												63	7	2	12	5	1	*Normally shows short position 2-6.								
8719	6	8	70					1	CV590	6	30	83					1	CV808	3	41	45	7	1	4	3	1
									CV591	6	30	83					1				45	7	1	4	5	1
BPM04	6	3	77					2	CV592	6	30	83					1	CV815	2	37	43	8	1	7	6	1
CV131	6	41	35	4	3	12	1	1	CV593	5	33	12					2	CV818	3	41	*42	7	1	5	3	1
CV133	6	41	41	4	3	1	6	1				12					1	*Normally shows short position 2-6.								
CV136	6	41	34	4	3	12	1	1	CV594	6	30	77					1	CV819	3	38	45	7	2	8	5	1
CV138	6	41	30	4	3	12	1	1	CV595	6	30	77					1	CV820	3	41	*48	7	1	5	3	1
CV140	6	41	33	3	4	12	2	1	CV657	6	38	50	7	2	12	10	1	*Normally shows short position 2-6.								
			33	3	4	12	7	1	CV660	6	30	60					1				32				1	
CV216	50	38	*99	2	1	3	5	1									1	*Normally shows short position 2-6.								
*Normally shows short position 11.									CV661	6	30	74					1	*Normally shows short position 2-6.								
*Normally shows grid emission.									CV664	6	41	*48	4	3	1	6	1	CV841	5	33	16					1
CV283	6	41	33	3	4	12	2	1	*Normally shows short position 2-7.												16				2	
			33	3	4	12	7	1	CV665	6	1	*73					1	CV842	5	33	32					1
CV450	6	29	*82					1	*Tube good if it reads 23 or more.												32				2	
*For plate cap use jack next to socket 26.																										



# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.
CV844	6	38	40	7	2	12	6	1	CV924	12	25	*85					1	CV1856	5	33	32					1
CV845	6	38	40	7	2	12	5	1				*85					2	CV1857	5	38	52	8	7	12	3	1
CV846	6	30	60					1				*Tube good if it reads 22 or more.				1	CV1862	6	3	77					1	
CV848	6	1	80					1	CV925	12	25	78					2	CV1863	5	33	12					1
CV849	6	30	60					1				78						CV1864	5	33	12					2
CV850	6	1	63					1	CV930	12	37	45	8	1	12	4	1	CV1873	6	30	74					1
CV851	6	38	35	7	2	12	5	1				45	8	1	12	5	1	CV1876	6	30	60					1
CV852	6	41	14	4	3	1	6	1	CV939	25	38	40	7	2	12	5	1	CV1878	6	38	54	7	2	12	5	1
CV858	6	2	60					1	CV945	30	37	40	8	1	12	2	1	CV1882	6	30	38					1
			60					2				40	8	1	12	7	1	CV1893	6	38	55	7	2	12	10	1
CV862	6	38	53	7	2	12	5	1	CV946	30	37	40	8	1	12	2	1				65	7	2	12	4	1
CV865	6	30	69					1				40	8	1	12	7	1	CV1894	6	38	55	7	2	12	10	1
CV866	6	30	83					1	CV995	6	41	36	4	3	2	1	1				65	7	2	12	4	1
CV867	6	38	46	8	7	11	2	1	CV1067	6	29	93					1	CV1895	50	38	*70	2	11	3	5	1
			68	8	7	12	4	1	CV1071	5	33	16					2				*Normally shows short position 11.					
												16									*Normally shows grid emission.					
CV873	6	33	17					1	CV1074	6	38	50	7	2	12	10	1	CV1902	6	38	45	7	2	12	5	1
			17					2	CV1268	5	33	32					1	CV1908	6	38	40	7	2	12	10	1
CV876	6	37	48	8	1	12	3	1				32					2	CV1909	6	38	40	7	2	12	10	1
			48	8	1	12	6	1	CV1280	6	38	44	7	2	12	10	1	CV1910	6	38	40	7	2	12	10	1
CV877	6	37	45	8	1	12	6	1	CV1285	6	38	47	7	2	12	4	1	CV1911	6	29	91					1
CV878	6	37	40	8	1	12	4	1				47	7	2	12	5	1	CV1912	6	29	91					1
CV879	6	37	40	8	1	12	6	1	CV1301	6	38	48	7	2	12	3	1	CV1926	6	26	52					1
CV880	6	37	52	8	1	12	6	1				48	7	2	12	5	1	CV1928	12	1	78					1
CV881	6	37	52	8	1	12	6	1	CV1375	6	9	62					1	CV1929	6	38	48	7	2	12	3	1
CV882	6	37	40	8	1	4	3	1	CV1377	5	33	10					2	CV1930	6	38	48	7	2	12	5	1
			68	8	1	4	3	1				10					1	CV1931	6	38	48	7	2	12	3	1
CV883	6	37	42	8	1	12	4	1	CV1633	12	8	74					2	CV1932	6	29	93					1
CV885	6	37	38	8	1	12	6	1	CV1649	6	29	99					1	CV1933	6	29	93					1
CV886	6	37	38	8	1	12	6	1				99					1	CV1934	6	29	93					1
CV887	6	37	50	8	1	4	3	1	CV1741	6	29	53					1	CV1935	6	38	50	7	2	12	10	1
			68	8	1	4	5	1	CV1753	35	37	34	8	1	12	6	1	CV1936	6	38	50	7	2	12	10	1
			68	8	1	4	6	1	CV1757	6	1	93					1	CV1937	6	38	50	7	2	12	10	1
CV890	6	37	*33	8	2	1	5	1	CV1758	1	41	55	7	1	5	6	1	CV1938	6	29	92					1
									CV1762	6	1	82					1	CV1940	6	29	92					1
*Normally shows short position 3-4-6-7.									CV1763	6	41	*85	4	3	1	7	1	CV1941	6	38	52	7	2	12	10	1
CV891	6	37	40	8	1	4	3	1				*Normally shows short position 5-6.					1	CV1942	6	38	48	7	2	12	3	1
			69	8	1	4	3	1	CV1777	6	37	37	8	1	12	6	1	CV1943	6	29	93					1
CV892	6	37	69	8	1	4	6	1	CV1784	6	30	38					1	CV1944	6	38	35	7	2	12	5	1
			47	8	1	12	6	1	CV1790	6	37	50	8	1	12	3	1	CV1945	6	38	35	7	2	12	5	1
			68	8	1	12	3	1				50	8	1	12	8	1	CV1946	6	38	35	7	2	12	5	1
CV893	6	37	45	8	1	12	4	1	CV1800	1	38	57	7	2	12	5	1	CV1947	6	29	63					1
			45	8	1	12	5	1	CV1802	1	38	57	7	2	12	3	1	CV1948	6	29	63					1
CV894	6	37	36	8	1	12	6	1	CV1803	1	38	54	7	2	12	5	1	CV1949	6	41	43	4	3	12	1	1
CV895	6	37	35	8	1	12	8	1	CV1805	1	38	54	7	2	12	5	1	CV1950	6	38	44	7	2	12	10	1
CV896	6	37	45	8	1	12	4	1	CV1811	1	38	58	7	2	12	5	1	CV1951	6	38	44	7	2	12	10	1
			65	8	1	12	5	1				86	7	2	12	10	1	CV1956	6	38	47	7	2	12	4	1
			65	8	1	12	6	1				*99	7	2	12	8	1	CV1957	6	38	47	7	2	12	4	1
CV897	6	37	35	8	1	12	6	1				*Tube good if it reads 30 or more.					1	CV1958	6	38	47	7	2	12	4	1
									CV1818	1	38	55	7	2	12	10	1				47	7	2	12	5	1
CV898	6	37	42	8	1	12	4	1				96	7	2	12	5	1	CV1959	50	4	44					1
			42	8	1	12	5	1	CV1819	6	29	93					1	CV1961	12	1	82					1
CV899	6	37	35	8	1	12	4	1	CV1820	1	38	55	7	2	12	10	1	CV1962	6	38	52	7	2	12	10	1
CV900	6	37	35	8	1	12	6	1				96	7	2	12	5	1				63	7	2	12	4	1
									CV1821	2	38	53	7	2	12	10	1	CV1963	6	38	52	7	2	12	10	1
CV901	6	37	45	8	1	12	3	1	CV1823	2	38	53	7	2	12	10	1				63	7	2	12	4	1
CV910	12	38	45	7	2	12	5	1	CV1824	1	38	48	7	2	12	5	1				63	7	2	12	5	1
CV916	12	38	48	7	2	12	3	1	CV1826	1	38	48	7	2	12	3	1				63	7	2	12	4	1
CV917	12	38	50	7	2	12	10	1	CV1829	1	38	54	7	2	12	5	1				63	7	2	12	5	1
CV918	12	38	52	7	2	12	10	1	CV1846	5	33	22					1				63	7	2	12	5	1
CV919	12	38	41	8	7	12	2	1				22					2				63	7	2	12	4	1
CV920	12	38	41	8	7	12	3	1	CV1849	5	33	32					2				63	7	2	12	5	1
CV921	12	38	46																							

\*Normal Shorts refer to position of "D" Switch.

CV844-CV1963

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.
CV1964	6	38	52 63 63	7	2	12	10	1 1 1	CV3523	6	38	*38	7	2	1	5	1	DL36	1	38	48	7	2	12	5	1
																		DL91	1	41	*55	7	1	5	3	1
CV1966	6	38	37	7	2	12	5	1																		
CV1967	6	38	37	7	2	12	5	1	CV3798	50	38	*70	2	11	3	5	1	DL92	3	41	*48	7	1	5	3	1
CV1969	6	38	48	8	7	12	3	1																		
CV1970	6	38	48	8	7	12	3	1																		
CV1972	6	38	41	8	7	12	3	1	CV3799	50	38	*69	2	11	3	5	1	DL93	3	41	*36	7	1	5	4	1
CV1973	6	38	41	8	7	12	3	1																		
CV1974	6	38	47	7	2	12	10	1																		
CV1975	6	38	47	7	2	12	10	1																		
CV1976	6	38	37	7	2	12	5	1																		
CV1978	6	30	77					1	CV4007	6	41	33	3	4	12	2	1	DL94	3	41	45	7	1	5	6	1
CV1981	6	30	84					1																		
CV1982	6	30	84					1	CV4010	6	1	63						DL95	3	41	*42	7	1	5	3	1
CV1985	6	25	*85 *85					2	CV4018	6	41	32	4	3	5	1	1	DL96	3	41	45	7	1	5	6	1
									CV4024	12	8	74 74						DP61	6	1	63					1
																		DY30	1	32	55					1
									D2M9	6	41	33	3	4	12	2	1	DY80	1	24	85					1
																		DY86	1	24	35					1
									D63	6	38	48	7	2	12	3	1	DY87	1	24	35					1
																		DY802	1	24	56					1
																		E55L	6	44	*25	4	5	7	8	1
									D77	6	41	33	3	4	12	2	1									

\*Normal Shorts refer to position of "D" Switch.

CV1964-E8F80



## B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Beam- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Beam- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Beam- tivity	A	B	C	D	Test Pos.
6BR3	6	39	31	5	4	12	2	1	6BR3	6	39	31	5	4	12	2	1	6BR3	6	39	31	5	4	12	2	1
6BF89	6	39	32	5	4	12	7	1	6BF89	6	39	33	5	4	12	8	1	6BF89	6	39	33	5	4	12	8	1
			33	5	4	12	2	1				33	5	4	12	2	1									
			60	5	4	12	7	1				60	5	4	12	7	1									
6C81	6	39	30	4	5	12	1	1	6C81	6	39	30	4	5	12	1	1	6C81	6	39	30	4	5	12	1	1
			30	4	5	12	1	1				30	4	5	12	1	1									
			30	4	5	12	1	1				30	4	5	12	1	1									
6C86	6	40	29	4	5	3	6	1	6C86	6	40	29	4	5	3	6	1	6C86	6	40	29	4	5	3	6	1
6C88	6	39	*85	4	5	7	8	1	6C88	6	39	*85	4	5	7	8	1	6C88	6	39	*85	4	5	7	8	1
*Normally shows short position 1-3-6-9.									*Normally shows short position 1-3-6-9.									*Normally shows short position 1-3-6-9.								
6C90	6	41	41	4	3	1	6	1	6C90	6	41	41	4	3	1	6	1	6C90	6	41	41	4	3	1	6	1
6C91	6	41	*29	4	3	6	1	1	6C91	6	41	*29	4	3	6	1	1	6C91	6	41	*29	4	3	6	1	1
*Normally shows short position 2-5.									*Normally shows short position 2-5.									*Normally shows short position 2-5.								
6C92	6	2	83					1	6C92	6	2	83					1	6C92	6	2	83					1
6C95	6	41	32	4	3	1	2	1	6C95	6	41	32	4	3	1	2	1	6C95	6	41	32	4	3	1	2	1
6C97	6	41	33	4	3	1	2	1	6C97	6	41	33	4	3	1	2	1	6C97	6	41	33	4	3	1	2	1
6C806S	6	40	29	4	5	3	6	1	6C806S	6	40	29	4	5	3	6	1	6C806S	6	40	29	4	5	3	6	1
6C900	6	5	56					1	6C900	6	5	56					1	6C900	6	5	56					1
6C8010	6	39	*73	5	4	7	8	1	6C8010	6	39	*73	5	4	7	8	1	6C8010	6	39	*73	5	4	7	8	1
*Normally shows shorts position 1, 3, 6, 9.									*Normally shows shorts position 1, 3, 6, 9.									*Normally shows shorts position 1, 3, 6, 9.								
6C35	6	25	*85					1	6C35	6	25	*85					1	6C35	6	25	*85					1
*Tube good if it reads 22 or more.									*Tube good if it reads 22 or more.									*Tube good if it reads 22 or more.								
6C81	12	8	74					1	6C81	12	8	74					1	6C81	12	8	74					1
6C82	12	8	75					2	6C82	12	8	75					2	6C82	12	8	75					2
6C83	12	8	*85					1	6C83	12	8	*85					1	6C83	12	8	*85					1
*Tube good if it reads 22 or more.									*Tube good if it reads 22 or more.									*Tube good if it reads 22 or more.								
6C84	6	39	33	5	4	7	2	1	6C84	6	39	33	5	4	7	2	1	6C84	6	39	33	5	4	7	2	1
6C85	6	8	33	5	4	7	6	1	6C85	6	8	33	5	4	7	6	1	6C85	6	8	33	5	4	7	6	1
			70									1	70								1					
			70									1	70								1					
6C86	6	39	33	5	4	12	2	1	6C86	6	39	33	5	4	12	2	1	6C86	6	39	33	5	4	12	2	1
6C88	6	39	33	5	4	12	7	1	6C88	6	39	33	5	4	12	7	1	6C88	6	39	33	5	4	12	7	1
			31	5	4	12	2	1				31	5	4	12	2	1									
			31	5	4	12	7	1				31	5	4	12	7	1									
6C89	6	39	29	4	5	7	2	1	6C89	6	39	29	4	5	7	2	1	6C89	6	39	29	4	5	7	2	1
6C91	6	2	29	4	5	7	6	1	6C91	6	2	29	4	5	7	6	1	6C91	6	2	29	4	5	7	6	1
			60									2	60								2					
			60									2	60								2					
6C189	6	8	30					1	6C189	6	8	30					1	6C189	6	8	30					1
6C801S	12	8	74					1	6C801S	12	8	74					1	6C801S	12	8	74					1
			74									2	74								2					
			75									2	75								2					
6C802S	12	8	75					2	6C802S	12	8	75					2	6C802S	12	8	75					2
6C808	6	39	36	4	5	12	1	1	6C808	6	39	36	4	5	12	1	1	6C808	6	39	36	4	5	12	1	1
6C808	6	39	36	4	5	12	9	1	6C808	6	39	36	4	5	12	9	1	6C808	6	39	36	4	5	12	9	1
			41	4	5	6	1	1				41	4	5	6	1	1									
			41	4	5	6	9	1				41	4	5	6	9	1									
6C960	6	2	49					2	6C960	6	2	49					2	6C960	6	2	49					2
6CF80	6	11	66					1	6CF80	6	11	66					1	6CF80	6	11	66					1
			55									2	55								2					
			79									2	79								2					
6CF82	6	11	58					1	6CF82	6	11	58					1	6CF82	6	11	58					1
6CF86	6	39	25	4	5	9	2	1	6CF86	6	39	25	4	5	9	2	1	6CF86	6	39	25	4	5	9	2	1
6CF200	6	42	25	4	5	1	6	1	6CF200	6	42	25	4	5	1	6	1	6CF200	6	42	25	4	5	1	6	1
			30	5	6	12	9	1				30	5	6	12	9	1									
			30	5	6	12	10	1				30	5	6	12	10	1									
6CF201	6	42	28	5	6	12	3	1	6CF201	6	42	28	5	6	12	3	1	6CF201	6	42	28	5	6	12	3	1
6CF202	6	42	32	5	6	12	10	1	6CF202	6	42	32	5	6	12	10	1	6CF202	6	42	32	5	6	12	10	1
			29	5	6	12	3	1				29	5	6	12	3	1									
			33	5	6	12	10	1				33	5	6	12	10	1									
6CF801	6	22	62					1	6CF801	6	22	62					1	6CF801	6	22	62					1
6C801	6	22	78					2	6C801	6	22	78					2	6C801	6	22	78					2

◆ Use TC-80 Adapter      \*Normal Shorts refer to position to "D" Switch.

- Use TC-628 Adapter.

**FBF82-VT62**

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	O	D	Test Pos.
KT66	6	29	63					1	NR85	6	29	91					1	PFL200	17	42	27	5	6	12	1	1
KT68	6	29	43					1	NR95	25	29	47					1	PH4	6	38	45	7	2	12	5	1
KT63	6	38	50	7	2	12	10	1	NU20	5	33	32					2	PL36	25	27	58					1
L63	6	29	93					1				32					2	PL81	19	39	*32	5	4	7	2	1
L77	6	41	41	4	3	1	8	1	OBC3	12	38	42	8	7	12	2	1	*Normally shows short position 1-6-9.								
LC900	3	5	56					1	OF1	6	38	47	7	2	12	4	1	PL82	16	23	68					1
LCF80	6	11	66					2	OH4	12	38	45	7	2	12	5	1	PL83	12	39	30	5	4	12	2	1
			55					1	OSW2190	6	30	60					1	PL84	15	23	58					1
LCF200	5	42	30	5	6	12	3	1	OSW2192	6	30	38					1	PL95	4	3	88					1
			30	5	6	12	10	1	OSW2600	6	30	60					1	PL500	30	44	*25	4	5	2	1	1
LCF201	5	42	28	5	6	12	3	1	OSW2601	6	30	38					1	*Normally shows short position 3-6-7-8.								
			32	5	6	12	10	1	OSW3105	6	38	42	8	1	12	2	1	PL504	30	44	*25	4	5	2	1	1
LCF201	6	11	80					2				71	8	1	12	4	1	*Normally shows short position 3-6-7-8.								
			85					1				71	8	1	12	5	1	PL505	40	44	*26	4	5	1	8	1
LCF801	5	22	62					1									1	*Normally shows short position 2-3-6-7.								
			78					2	OSW3106	6	29	79					1	PL508	17	44	30	4	5	1	8	1
LCH200	5	42	31	5	6	12	3	1	OSW3108	6	29	63					1	PL509	30	44	*26	4	5	1	8	1
			30	5	6	12	8	1	OSW3109	6	38	48	7	2	12	3	1	*Normally shows short position 2-3-6-7.								
LCL80	4	39	37	5	4	12	9	1				48	7	2	12	5	1	PL521	30	44	*29	4	5	1	8	1
			44	5	4	12	2	1	OSW3111	6	30	84					1	*Normally shows short position 2-3-6-7.								
LCL82	12	39	33	5	4	12	3	1	OSW3112	6	29	93					1	PL802	16	9	51					1
			39	5	4	12	1	1	PABC80	9	17	90					2	PL820	19	39	*32	5	4	7	2	1
LCL84	10	39	26	4	5	12	8	1				63					1	*Normally shows short position 1-6-9.								
			26	4	5	12	1	1	PC86	4	40	29	4	5	3	6	1	PM04	6	1	78					1
LCL85	10	39	25	4	5	12	9	1	PC88	4	39	*85	4	5	7	8	1	PM05	6	1	63					1
			25	4	5	12	2	1	*Normally shows short position 1-3-6-9.								PY32	30	38	24	2	7	6	3	1	
LF183	4	9	40					1	PC92	3	2	83					1	PY82	19	39	29	4	5	6	9	1
LF184	4	9	58					1	PC95	4	41	33	4	3	1	2	1	PY88	30	40	30	5	4	7	3	1
LFL200	10	42	27	5	6	12	1	1	PC97	5	41	33	3	4	1	2	1	PY80	19	39	29	5	4	12	9	1
			27	5	6	12	8	1	PC900	4	5	56					1	PY81	17	39	33	5	4	2	9	1
								1	PCC84	7	39	33	5	4	7	2	1	PY82	19	39	29	4	5	6	9	1
LL86	10	23	58					1				33	5	4	7	8	1	PY88*	30	40	30	5	4	7	3	1
LL500	18	44	*25	4	5	2	1	1				33	5	4	7	8	1	*If no test, use alternate settings.								
								1	PCC85	9	8	70					2	PY88	30	40	30	5	4	3	7	1
LL505	25	44	*26	4	5	1	8	1	PCC88	7	39	31	5	4	12	2	1	PY500	40	38	32	7	8	2	5	1
								1				31	5	4	12	7	1	QA240	6	41	41	4	3	1	6	1
LL521	22	44	*29	4	5	1	8	1	PCC89	7	39	29	4	5	7	2	1	QA2404	6	41	33	3	4	12	2	1
								1				29	4	5	7	8	1		33	3	4	12	7	1	1	
LL802	10	9	51					1	PCC189	7	8	30					1	QA2406	12	8	74					1
LN152	6	39	37	5	4	12	9	1				30					2		74						2	
			44	5	4	12	2	1	PCF80	8	11	66					1	QA2407	6	41	44	4	3	12	1	1
LY81	10	39	33	5	4	2	9	1				55					2		44	4	3	12	6	1	1	
LY88*	22	40	30	5	4	7	3	1	PCF82	9	11	79					1	QA2408	6	25	78					1
								1				55					2		78						2	
LY88	22	40	30	5	4	3	7	1	PCF86	7	39	25	4	5	3	2	1	QE03/10	6	39	33	5	4	8	9	1
LY500	30	38	32	7	8	2	5	1				25	4	5	1	6	1	QE05/40	6	38	*38	7	2	1	5	1
LZ319	9	11	66					1	PCF200	8	42	30	5	6	12	3	1	*Normally shows short position 4-6.								
			55					2				30	5	6	12	10	1	QS150/40	50	38	*99	2	11	3	5	1
LZ329	9	11	66					1	PCF201	8	42	28	5	6	12	3	1	*Tube good if it reads 60 or more.								
			55					2				32	5	8	12	10	1	*Normally shows short position 11.								
M8081	6	2	60					1	PCF801	8	22	62					1	*Normally shows grid omission.								
			60					2				78					2	OV03/12	6	39	33	5	4	8	9	1
M8100	6	1	63					1	PCF802	9	11	80					1	OV06/20	6	38	*38	7	2	1	5	1
N14	1	38	54	7	2	12	5	1				85					2	*Normally shows short position 4-6.								
N17	3	41	*48	7	1	5	3	1	PCF805	7	39	30	4	5	8	7	1	R52	5	33	12					1
								1				33	4	5	8	9	1									2
N18	3	41	*42	7	1	5	3	1	PCH200	9	42	31	5	6	12	3	1	SN7	1	32	55					1
								1				30	5	6	12	6	1	SP6	6	41	30	4	3	12	1	1
N19	3	41	45	7	1	5	8	1	PCL82	16	39	33	5	4	12	3	1	T2M05	6	41	34	4	3	12	5	1
N22LL	19	44	33	4	5	7	1	1				39	5	4	12	1	1									1
N152	19	39	*32	5	4	7	2	1	PCL84	15	39	26	4	5	12	8	1	TJ880	6	39	*27	5	4	6	2	1
								1				26	4	5	12	1	1	*Normally shows shorts position 3, 9.								
N329	16	23	68					1	PCL85	18	39	25	4	5	12	9	1	TM12	6	41	*85	4	3	1	7	1
N709	6	23	68					1				25	4	5	12	2	1	*Normally shows short position 5-6.								
NCC189	4	39	30	5	4	12	2	1	PCL86	14	39	25	4	5	2	8	1	TS51	6	1	63					1
			30	5	4	12	7	1				35	4	5	7	1	1	TS52	6	2	60					1
NR67	6	38	44	7	2	12	10	1	POS00	9	44	*52	4	5	12	8	1									2
NR78	6	29	99					1	*Normally shows short position 2-3-6-7-9.								TS-876C	6	39	*28	4	5	1	2	1	
NR78A	6	29	93					1	PF9	6	38	52	7	2	12	10	1	U50	5	33	32					1
NR81	6	38	52	7	2	12	10	1	PF86	4	39	33	4	5	2	9	1									1
NR83	6	38	50	7	2	12	10	1									1									2

◆Use TC-80 Adapter

■Use TC-62B Adapter.

\*Normal Shorts refer to position of "D" Switch.

KT66-U50



# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
U52	5	33	16					1	VK105	50	38	*85	2	11	3	5	1	A155	6	8	55					1	
			16					2																		2	
U54	5	33	10					1										X727	6	1	91					1	
			10					2										XB767A	6	38	34	7	2	12	5	1	
U78	6	41	44	4	3	12	1	1	VR150/30	50	38	*99	2	11	3	5	1	XC95	2	41	33	4	3	1	2	1	
U147	6	33	44	4	3	12	6	1										XC97	2	41	33	4	3	1	2	1	
			15					1										XC900	2	5	56					1	
			15					2	VT52	6	29	92					1	XCC189	4	8	30					1	
U149	6	37	45	8	1	12	5	1	V165	7	29	98					1								2		
			45	8	1	12	6	1	VT66	6	29	91					1	XCF80	4	11	66					1	
U153	17	39	33	4	5	2	9	1	VI/4	5	33	12					1								2		
U154	19	39	29	4	5	6	8	1										XCF86	5	39	24	4	5	5	2	1	
U192	19	39	29	4	5	6	9	1	VT86	6	38	52	7	2	12	10	1								1		
U709	6	39	34	5	4	12	1	1	VT87	6	38	44	7	2	12	10	1	XCF801	4	22	62					1	
			34	5	4	12	7	1	VT88	6	38	52	7	2	12	10	1	XCH81	3	39	85	5	4	12	1	1	
UAA91	19	41	33	3	4	12	2	1																			
			33	3	4	12	7	1																			
UABC80	25	17	90					1	VT90	6	38	48	7	2	12	3	1									1	
			63					2																		1	
UBF80	17	39	33	5	4	12	2	1	VT91	6	38	50	7	2	12	10	1	XCL84	8	39	26	4	5	12	8	1	
																										1	
			65	5	4	12	7	1	VI93	6	38	55	7	2	12	10	1	ACL85	18	33	25	4	5	12	8	1	
			65	5	4	12	8	1																		1	
UC92	9	2	83					1	VT94	6	29	93					1	XF80	3	9	76					1	
UCC84	22	39	33	5	4	7	2	1	VT96	6	38	47	7	2	12	4	1	XF85	3	9	62					1	
			33	5	4	7	8	1										XF183	3	9	40					1	
UCC85	25	8	70					1	VI97	5	33	32					1	XF184	3	9	58					1	
			70					2										XL36	12	27	57					1	
UCF80	25	11	66					1	VT99	6	38	45	7	2	12	5	1	XL84	8	23	68					1	
			55					2										XL86	8	23	58					1	
UCH81	19	33	32	5	4	12	2	1	VT102	6	29	92					1	XL500	12	44	*25	4	5	2	1	1	
UCL82	50	39	33	5	4	12	3	1	VT103	6	38	42	8	7	12	2	1										
			39	5	4	12	1	1																			
UF80	19	9	76					1	VT104	12	38	42	8	7	12	2	1										
UF85	19	9	62					1																			
UF86	12	39	40	5	4	2	8	1																			
UF89	12	9	80					1	VT105	6	38	48	8	7	12	3	1										
UL84	50	23	58					1																			
UU12	6	38	34	5	4	12	1	1	VT107	6	29	79					1										
			34	5	4	12	7	1	VT112	6	30	60					1										
UY82	50	39	29	4	5	8	9	1	VT114	5	33	16					1										
UY85	35	40	30	4	5	1	8	1																			
V2M70	6	41	44	4	3	12	1	1	VT115	6	29	63					2										
			44	4	3	12	8	1	VT116	6	30	83					1										
V177	6	41	35	4	3	12	1	1	VT117	6	30	84					1										
V741	6	41	41	4	3	1	6	1	VT124	1	38	55	7	2	12	5	1										
V884	6	41	35	4	3	12	1	1	VT125	1	38	54	7	2	12	5	1										
V886	6	41	34	4	3	12	1	1	VT126	6	33	15					1										
VP6	6	41	35	4	3	12	1	1									2										
VP1321	12	41	*55	4	3	1	5	1	W17	1	41	55	7	1	5	6	1										
VR75								1	W77	6	41	35	4	3	12	1	1										
									W149	6	37	45	6	1	12	6	1										
									W719	6	9	62					1										
									W727	6	1	78					1										
VR90								1	X63(M)	6	38	45	7	2	12	5	1										
									X64	6	38	44	7	2	1	10	1										
									X73(M)	6	38	45	7	2	12	5	1										
									X107	19	1	91					1										

**FIDELITY NORTHWEST, INC.**

5920 So. 180th Street  
Box C-88727, Tukwila Branch  
Seattle, Wash. 98188  
(206) 575-0604

05:00 de  
XXXXX

Handwritten scribbles and numbers, including "25" and "29".

Dean's Radio  
417 N. Pearl  
Ellensburg,